



Original	Sustituto
	Display
	Eject
	On / Standby
	1
	2
	3
	CH+ / Page+
	4
	5
	6
	CH- / Page-
	7
	8
	9
	TRK+
	I.Select
	0

Original	Sustituto
	Count.Rst.
	TRK-
	F.Adv
	Index-
	Index+
	Count/TR
	Annul.
	Menu
	ENR.
	Timer
	Play
	<< Rew
	>> FF
	I> Slow
	Stop
	Pause / Still
	SP/LP

	Back / Return
	Vol-
	>>I / Preset+
	Down
	Up
	Text / Goto
	Exit / Cancel / Clear
	Menu / Home
	Rec / Rec Mode
	Sleep / Timer
	Play / Slow
	<< / Tune-
	>> / Tune+
	Shift + Play /
	Stop / Hold
	Pause / Step / Freeze
	Picture / Format



