





 



 

 



 



 

 













Original	Sustituto
	 Power
	 AV / Input / RDS
	 TV/Radio /
	 Mute / Dimmer
	 Smart / List
	 Fav / Marker / PC
	 Audio / Lang I/II
	 Info / Angle
	 Red / Netflix / Search
	 Subtitle / EQ
	 Text / Goto
	 Shift + Guide / EPG / --
	 Sound / Title
	 Display / Media
	 Zoom / Size
	 Green / APP / Repeat
	 << / Tune-

Original	Sustituto
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze
	 Up
	 Exit / Cancel / Clear
	 Stop / Hold
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 Menu / Home



