



Original	Sustituto
	Mute / Dimmer 
	Power 
	1 
	2 
	3 
	4 
	5 
	6 
	7 
	8 
	9 
	Shift + CH- / 
	I<< / Preset- 
	Shift + Sleep / Timer 
	0 
	Shift + CH+ / 
	>>I / Preset+ 

Original	Sustituto
	Info / Angle 
	Subtitle / EQ 
	Audio / Lang I/II 
	Smart / List 
	Vol+ 
	Setup / OPT / 
	CH+ / Page+ 
	Vol- 
	TV/Radio / 
	CH- / Page- 
	Text / Goto 
	Fav / Marker / PC 
	Guide / EPG / -/- 
	Exit / Cancel / Clear 
	Up 
	Left 
	OK 





Original	Sustituto	Original	Sustituto
	Right		Right
	Menu		Menu / Home
	Down		Down
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	>		Shift + Pause / Step /
	Film		Display / Media
	Zoom		Zoom / Size
			Sleep / Timer
			Shift + 8
			AV / Input / RDS

