



Original	Sustituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Freeze	 Shift + Pause / Step /
 0	 0
 Aspect Ratio	 D.Menu / Top
 Guide	 Guide / EPG / -/--
 ?	 Shift + Info / Angle
 TXT	 Text / Goto

Original	Sustituto
 OPT	 Setup / OPT /
 Back	 Back / Return
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Vol+	 Vol+
 ↑ Page+	 Shift + Up
 CH+	 CH+ / Page+
 Vol-	 Vol-
 ↓ Page-	 Shift + Down
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Sustituto	Original	Sustituto
	Green 		
	Yellow / YouTube / Repeat 		
	Blue / Prime Video / Random 		
	TV/Radio / 		
	Subtitle / EQ 		
	Audio / Lang I/II 		
	Sleep / Timer 		
	Rec / Rec Mode 		
	Play / Slow 		
	Pause / Step / Freeze 		
	Stop / Hold 		
	<< / Tune- 		
	I<< / Preset- 		
	>>I / Preset+ 		
	>> / Tune+ 		

