



 





 







 









 

 





 



 



 



 











Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Disp		Display / Media
	CH+		CH+ / Page+

Original	Sustituto	Original	Sustituto
	Vol-		Vol-
	Input		AV / Input / RDS
	CH-		CH- / Page-
	Zoom		Zoom / Size
	Up		Up
	Sleep		Sleep / Timer
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Auto		Smart / List
	Angle		Info / Angle
	I<<		I<< / Preset-





Original	Sustituto
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Open/Close	 Eject / Surround
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 II>/Step	 Pause / Step / Freeze
 Red/Setup	 Red / Netflix / Search
 Green/Menu	 Green / APP / Repeat
 Yellow/Title	 Yellow / YouTube / Repeat
 Blue/Lang	 Blue / Prime Video / Random

Original	Sustituto

