

 




















 

 

 





 















 

 




 
 



 









Original	Sustituto
 Power	 Power
 OSD	 Display / Media
 N/P	 Red / Netflix / Search
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10/0	 0
 10+	 Guide / EPG / -/--
 Goto	 Text / Goto
 Memory	 Fav / Marker / PC

Original	Sustituto
 Clear	 Exit / Cancel / Clear
 Balance	 Smart / List
 Language	 Audio / Lang I/II
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 PBC	 Picture / Format
 Perform NGA	 D.Menu / Top
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Return	 Back / Return
 Slow	 Shift + Play /
 Prog	 TV/Radio /
 Step	 Pause / Step / Freeze
 Setup	 Setup / OPT /
 Up	 Up



