













 





 

 

 

 

 

 







Original	Sustituto
	 Power
	 Info / Angle
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 AV / Input / RDS
	 0
	 Audio / Lang I/II
	 Picture / Format
	 Back / Return

Original	Sustituto
	 Menu / Home
	 Exit / Cancel / Clear
	 Up
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Smart / List
	 Sleep / Timer
	 Guide / EPG / -/-
	 Fav / Marker / PC
	 << / Tune-
	 Red / Netflix / Search





	Original	Sustituto
	>>	>> / Tune+
	GREEN	Green / APP / Repeat
	I<<	I<< / Preset-
	YELLOW	Yellow / YouTube / Repeat
	BLUE	Blue / Prime Video / Random
	>>I	>>I / Preset+
	PLAY	Play / Slow
	PAUSE	Pause / Step / Freeze
	TEXT	Text / Goto
	STOP	Stop / Hold
	SUBTITLE	Subtitle / EQ
	RADIO	TV/Radio /
	OPT	Setup / OPT /
	DMP	Display / Media
	INDEX	D.Menu / Top
	REC	Rec / Rec Mode

Original	Sustituto

