










 















 
 
 

 
 





Original	Sustituto
 Power	 Power
 Source	 AV
 TV	 TV/R
 VIDEO	 Smart
 PC	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 i	 Info
 List	 List

Original	Sustituto
 ZAP	 Pre Ch
 Format	 Format
 Mute	 Mute
 PIP	 3D
 Text	 Text
 Up / P+	 Up
 Up / P+	 Ch +
 Down / P-	 Down
 Down / P-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Menu	 Menu
 PIP Swap	 Back
 Auto	 Options
 Sound	 Dual





Original	Sustituto	Original	Sustituto
 Freeze / Hold	 +  Shift + Stop	 Clock / Mix	 +  Shift + Text
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Rec	 Rec		
 Stop	 Stop		
 Pause	 Pause		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 F1	 +  Shift + 1		
 F2	 +  Shift + 2		
 F3	 +  Shift + 3		
 F4	 +  Shift + 4		
 P-Pos	 +  Shift + Ch +		
 P-Size	 +  Shift + Ch -		

