
 


















Original		Sustituto		Original		Sustituto	
	Power		Power		7		7
	Mute		Mute / Dimmer		8		8
	Vol-		Vol-		9		9
	Vol+		Vol+		0		0
	P-		CH- / Page-		-/--		Guide / EPG / -/--
	P+		CH+ / Page+		Contrast-		I<< / Preset-
	Power 2		Shift + Power		Contrast+		>>I / Preset+
	[ + ]		Display / Media		Brightness-		Down
	PP		Back / Return		Brightness+		Up
	[ ]		Info / Angle		Text		Text / Goto
	[ ]↔		Picture / Format		Text Subcode		Subtitle / EQ
	1		1		Text Hold		Shift + Stop /
	2		2		Text Size		Zoom / Size
	3		3		Text Reveal		Smart / List
	4		4		Text Index / Play		Play / Slow
	5		5		Text Mix		Shift + Text /
	6		6		Text Cancel		Exit / Cancel / Clear

 










 


 









 























Original	Sustituto	Original	Sustituto
 Red / Rec	 Red / Netflix / Search		
 Red / Rec	 Rec / Rec Mode		
 Green / Stop	 Green / APP / Repeat		
 Green / Stop	 Stop / Hold		
 Yellow / <<	 Yellow / YouTube / Repeat		
 Yellow / <<	 << / Tune-		
 Blue / >>	 Blue / Prime Video / Random		
 Blue / >>	 >> / Tune+		





Original		Sustituto		Original		Sustituto	
	Power		Power		7		7
	Mute		Mute / Dimmer		8		8
	Vol-		Vol-		9		9
	Vol+		Vol+		0		0
	P-		CH- / Page-		-/--		Guide / EPG / -/--
	P+		CH+ / Page+		Text		Text / Goto
	Power 2		Shift + Power		Text Subcode		Subtitle / EQ
	[ + ]		Display / Media		Text Hold		Shift + Stop /
	PP		Back / Return		Text Size		Zoom / Size
	[ ]		Info / Angle		Text Reveal		Smart / List
	[ ]↔		Picture / Format		Play		Play / Slow
	1		1		Text Mix		Shift + Text /
	2		2		Text Cancel		Exit / Cancel / Clear
	3		3		Rec		Rec / Rec Mode
	4		4		Stop		Stop / Hold
	5		5		<<		<< / Tune-
	6		6		>>		>> / Tune+

