 

 

















 

 



 

 





 




 

 

 



 

 

 





 















 












 












 
 


Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play/Pause/Hold	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Size	 Stop / Hold
 Rec Menu	 Rec / Rec Mode
 <<	 << / Tune-
 >> / Cancel	 >> / Tune+
 I<< / Index	 I<< / Preset-
 >>I/Reveal	 >>I / Preset+
 Nicam	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Aspect	 Picture / Format
 Sleep	 Sleep / Timer
 Tv	 TV/Radio /
 Subpage	 D.Menu / Top
 PC Auto	 Setup / OPT /

Original	Sustituto
 Text	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 ??	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-





	Original	Sustituto		Original	Sustituto
	1	 1	1	 DTV/Radio	 +  Shift + TV/Radio / Program
	2	 2	2	 Media	 +  Shift + Display / Media
	3	 3	3	 -/--	 +  Shift + Guide / EPG / -/--
	4	 4	4	 Repeat	 +  Shift + Green / APP / Repeat
	5	 5	5	 A-B	 +  Shift + Yellow / YouTube / Repeat A-B
	6	 6	6		
	7	 7	7		
	8	 8	8		
	9	 9	9		
	TVG	 Guide / EPG / -/--			
	0	 0	0		
	FAV	 Fav / Marker / PC			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	Freeze	 +  Shift + Pause / Step / Freeze			

