


 

 

 
 
 

 
 


 
 


 
 
 






 



 
 


 
 

 









 



 




 




 


 
 





 

 
 
 
 
 
 
 




 
 




Original	Sustituto	Original	Sustituto
 Standby	 Power	 8	 8
 Mute	 Mute	 9	 9
 P.Mode	 Shift + Format	 0	 0
 S.Mode	 Shift + Dual	 0/10	 Guide
 Aspect	 Format	 Recall/Program	 Pre Ch
 Sleep	 Sleep	 Menu	 Menu
 TTX	 Text	 Source	 AV
 Index	 List	 i/Display	 Info
 Subtitle	 Subt	 Exit	 Exit
 Audio/I-II	 Dual	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 CH+	 Ch +





Original	Sustituto
 CH-	 Ch -
 Red/D.Setup	 Red
 Green/D.Menu	 Green
 Yellow/T.List/Title	 Yellow
 Blue/R.List/D.Display	 Blue
 Open/Close/Mix	 Eject
 Goto/Hold	 Media
 A-B/Reveal	 Options
 Zoom/Size	 Shift + Eject
 Subpage	 Back
 Tv/Radio	 TV/R
 Rec/Repeat	 Rec
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <</List	 <<
 >>	 >>

Original	Sustituto
 I<<	 I<<
 >>I/FAV	 >>I

