



Original	Sustituto
 Power	 Power
 Tv/AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/-	 Shift + Guide / EPG / -/-
 0	 0
 Back	 Back / Return
 Vol+	 Vol+
 Scan	 Smart / List
 P+	 CH+ / Page+

Original	Sustituto
 Vol-	 Vol-
 Zoom	 Zoom / Size
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK/Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Mute	 Mute / Dimmer
 Red / Picture	 Red / Netflix / Search
 Red / Picture	 Picture / Format
 Green / Sound	 Green / APP / Repeat
 Green / Sound	 Sound / Title
 Yellow / Sleep	 Yellow / YouTube / Repeat
 Yellow / Sleep	 Sleep / Timer
 Blue / Call	 Blue / Prime Video / Random





Original	Sustituto
TEXT	GOTO TEXT Text / Goto
MIX	SHIFT + GOTO TEXT Shift + Text /
SIZE	SHIFT + SIZE ZOOM Shift + Zoom /
INDEX	REC MODE Rec / Rec Mode
HOLD	HOLD Stop / Hold
REVEAL	SLOW Play / Slow
SUBPAGE	EQ SUBTITLE Subtitle / EQ
CANCEL	CLEAR EXIT Exit / Cancel / Clear
DVB MENU	TOP MENU D.MENU D.Menu / Top
i	ANGLE INFO Info / Angle
EPG	GUIDE EPG Guide / EPG / -/--
ESC	PC FAV MARKER Fav / Marker / PC
DVB	MEDIA DISPLAY Display / Media
FREEZE	STEP-FREEZE II Pause / Step / Freeze
I/II	LANG I/II AUDIO Audio / Lang I/II

Original	Sustituto

