














 
 
 


 
 


 

 

 



 

 
 
 

 

 






 
 



 



 
 
 

 
 


 

 
 




 

 
 


 
 
 
 
 

 
 
 




 





Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Sustituto	Original	Sustituto
 Vol -	 Vol -	 Vol -	 Vol -
 CH +	 Ch +	 CH +	 Ch +
 CH -	 Ch -	 CH -	 Ch -
 Exit	 Exit	 EXIT	 Exit
 Red / USB Left	 Red	 Red / USB Left	 Red
 Red / USB Left	 Shift + Left	 Red / USB Left	 Shift + Left
 Green / USB	 Green	 Green / USB	 Green
 Green / USB	 Shift + Down	 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow	 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up	 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue	 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right	 Blue / USB Right	 Shift + Right
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 Ok	 ENTER	 Ok
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down





Original	Sustituto	
		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Original	Sustituto	
		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

