












 

 
 
 


 



 

 

 



 
 
 
 
 

 

 
 





 
 



 



 
 
 

 
 


 

 
 




Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Sustituto	Original	Sustituto
 Vol -	 Vol -	 Vol -	 Vol -
 CH +	 Ch +	 CH +	 Ch +
 CH -	 Ch -	 CH -	 Ch -
 Exit	 Exit	 EXIT	 Exit
 Red / USB Left	 Red	 Red / USB Left	 Red
 Red / USB Left	 Shift + Left	 Red / USB Left	 Shift + Left
 Green / USB	 Green	 Green / USB	 Green
 Green / USB	 Shift + Down	 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow	 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up	 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue	 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right	 Blue / USB Right	 Shift + Right
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 Ok	 ENTER	 Ok
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down




 

 


 

 

 
 
 
 




 
 
 
 



 

 



 

 


Original	Sustituto	Original	Sustituto
PREV QV	Settings Options	Size	Format
NEXT FAV	FAV Pre Ch	Prog / Mix	Smart
Source	AV	Prog / Mix	Shift + Sleep
Sleep	Sleep	Return / SUBPG	Back
Picture	Shift + Format	Repeat / Reveal	Shift + Back
Sound	Shift + Dual	Search / Hold	TV/R
Display	Info		
I/II / Top	Dual		
FAV - / REV	<<		
FAV + / FWD	>>		
USR/CR / Text	Media		
USR/CR / Text	Text		
Play/Pause / Index	Play		
Play/Pause / Index	Shift + Info		
Play/Pause / Index	Pause		
Stop / Cancel	Stop		
Stop / Cancel	Shift + Exit		

Original	Sustituto
Size	Format
Prog / Mix	Smart
Prog / Mix	Shift + Sleep
Return / SUBPG	Back
Repeat / Reveal	Shift + Back
Search / Hold	TV/R





Original	Sustituto	Original	Sustituto
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

