






 
 


 
 


 
 


 
 







 


 
 
 


 



 

 


 


 
 





 
 



 




 
 




 


 
 

 
 

 
 




 
 
 


 

 
 

 





 



Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Sustituto	Original	Sustituto
 Vol -	 Vol -	 Vol -	 Vol -
 CH +	 Ch +	 CH +	 Ch +
 CH -	 Ch -	 CH -	 Ch -
 Exit	 Exit	 EXIT	 Exit
 Red / USB Left	 Red	 Red / USB Left	 Red
 Red / USB Left	 Shift + Left	 Red / USB Left	 Shift + Left
 Green / USB	 Green	 Green / USB	 Green
 Green / USB	 Shift + Down	 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow	 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up	 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue	 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right	 Blue / USB Right	 Shift + Right
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 Ok	 ENTER	 Ok
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down





Original	Sustituto	Original	Sustituto
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

