



Original	Sustituto
Power	Power
Tv/AV	AV / Input / RDS
1	1
2	2
3	3
Eject	Eject / Surround
4	4
5	5
6	6
Play/Pause	Play / Slow
7	7
8	8
9	9
Stop	Stop / Hold
0	0
-/--	Shift + Guide / EPG / -/--
Return	Back / Return

Original	Sustituto
Mute	Mute / Dimmer
Vol-	Vol-
Up	Up
CH+	CH+ / Page+
Vol+	Vol+
Left	Left
OK	OK
Right	Right
Sys Menu	D.Menu / Top
CH-	CH- / Page-
Down	Down
Display	Display / Media
Picture	Picture / Format
Sound	Sound / Title
Timer	Sleep / Timer
Nicam/A2	Audio / Lang I/II
Lan/Prog-	Shift + CH- / Page-





Original	Sustituto	
PROG+ ZOOM	Zoom/Prog+	+  Shift + CH+ /
SUB	Sub	Subtitle / EQ
GOTO	Goto	Text / Goto
TV/TXT DVB-MENU	SET/Tv/TXT/DVB-	Setup / OPT /
CANCEL TV FORMAT	Menu/Cancel/Tv Format	Menu / Home
REVEAL EXIT ANG	ANG/Reveal/Exit	Exit / Cancel / Clear
INFO TITLE	Title/info	+  Shift + Sound / Title
HOLD LANGUAGE	<</Hold/Languag	<< / Tune-
SIZE TEXT	>>/Size/Text	>> / Tune+
SUBPAGE FAV	I<</Subpage	I<< / Preset-
SUBPAGE FAV	FAV	Fav / Marker / PC
INDEX EPG	>>I/Index	>>I / Preset+
INDEX EPG	EPG	Guide / EPG / -/--
TV/RADIO	Red/Pro	Red / Netflix / Search
TV/RADIO	Tv/Radio	TV/Radio /
AUDIO	Green/Slow/Audio	Green / APP / Repeat
FREEZE	Yellow/Rep/Freeze	Yellow / YouTube / Repeat

Original	Sustituto
Blue/A-B/Subtitle	Blue / Prime Video / Random

