



Original	Sustituto
	Power
	Mute
	Red
	Green
	Yellow
	Blue
	<< / [≡o]
	>> / [≡?]
	I<< / [≡+]
	>>I / [≡..]
	Play
	Pause
	Stop
	[≡i]
	Text
	Subtitle
	Freeze

Original	Sustituto
	Info
	[I]/Menu
	Up
	Source
	Left
	OK
	Right
	Down
	EPG
	Exit
	Vol+
	FAV
	CH+
	Vol-
	REC/Rec
	CH-
	1





Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	

Original	Sustituto






Original	Sustituto	
Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<</Hold		<< / Tune-
>>/Index		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Nicam/A2		Audio / Lang I/II
Subtitle		Subtitle / EQ
Subpage		Eject / Surround
Size		Zoom / Size
Sleep		Sleep / Timer
DTV/Radio		TV/Radio /
Reveal		D.Menu / Top

Original	Sustituto	
TXT/MIX		Text / Goto
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left
Enter		OK
Right		Right
Cancel		Exit / Cancel / Clear
Down		Down
Back		Back / Return
Vol+		Vol+
List		Smart / List
CH+		CH+ / Page+
Vol-		Vol-
Mode		Display / Media
CH-		CH- / Page-
1		1

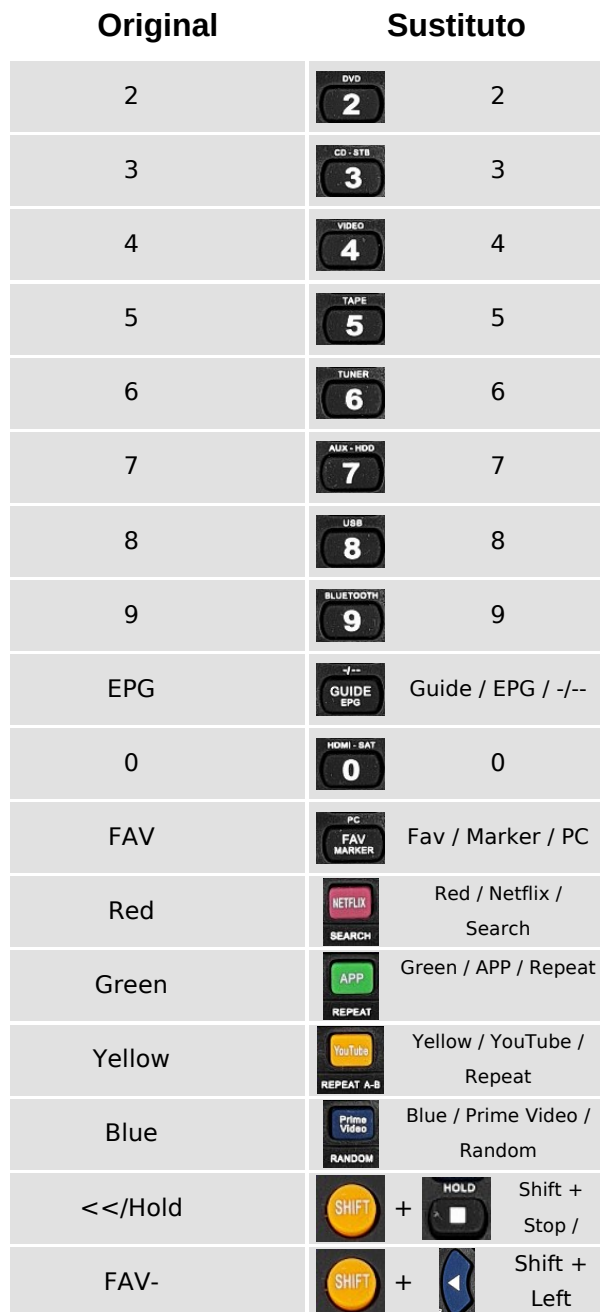

[illegible]



Original	Sustituto
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</[Timer]	 << / Tune-
>>/[≡?]	 >> / Tune+
I<</[≡↓]	 I<< / Preset-
>>I/[≡...]	 >>I / Preset+
Audio	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
I<</[≡↓]	 Zoom / Size
<</[Timer]	 Sleep / Timer
Text	 Text / Goto
Source/Av	 AV / Input / RDS
[II]	 Menu / Home

Original	Sustituto
Up	 Up
Info	 Info / Angle
Left	 Left
Ok	 OK
Right	 Right
Exit	 Exit / Cancel / Clear
Down	 Down
Recall	 Back / Return
Vol+	 Vol+
[≡i]	 Smart / List
Ch+	 CH+ / Page+
Vol-	 Vol-
Ch-	 CH- / Page-
1	 1
2	 2
3	 3
4	 4





Original	Sustituto	
5		5
6		6
7		7
8		8
9		9
Epg		Guide / EPG / -/--
0		0
Fav		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Freeze		Shift + Pause / Step /

Original	Sustituto

