

 

 




 







 

 

 



 



 





Original	Sustituto	Original	Sustituto
	Power		Power
	Rec		Rec / Rec Mode
	TV		TV/Radio /
	TXT		Text / Goto
	Home		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-
	W		Display / Media
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0

