 

 



 





 

 

 






 







 





Original	Sustituto
 Power	 Power
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 Audio/Lang	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 Tv/Radio	 TV/Radio /
 7	 7
 8	 8
 9	 9
 Exit	 Exit / Cancel / Clear
 CH.List	 Smart / List

Original	Sustituto
 0	 0
 Back	 Back / Return
 Menu	 Menu / Home
 CH-	 CH- / Page-
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 Vol+	 Vol+
 Setup	 Setup / OPT /
 Play/Timeshift	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Eject	 Eject / Surround





Original	Sustituto
Rec	Rec / Rec Mode
Text	Text / Goto
<<	<< / Tune-
>>/Reveal	>> / Tune+
I<</Hold	I<< / Preset-
>>I/Sub.P	>>I / Preset+
SUB.T	Subtitle / EQ
Index/Title	Shift + Sound / Title
Size/Zoom	Zoom / Size
D.Menu	D.Menu / Top
EPG	Guide / EPG / -/--
FAV/Prog	Fav / Marker / PC
P.Mode/Lang	Picture / Format
S.Mode/Search	Sound / Title
Info/Display	Info / Angle
Red/Angle	Red / Netflix / Search
Green/Slow	Green / APP / Repeat

Original	Sustituto
Yellow/A-B	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

