














 





 

 
 






Original	Sustituto
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Internet / Smart / List
	 Source / AV / Input / RDS
	 Lang / Audio / Lang I/II
	 Tv/Radio / TV/Radio /
	 Subtitle / EQ
	 LIB / Picture / Format
	 Rec / Rec Mode
	 Stop / Hold
	 << / Tune-
	 Play / Slow
	 Pause / Step / Freeze

Original	Sustituto
	 >> / Tune+
	 Menu / Home
	 Up
	 Back / Return
	 Left
	 OK
	 Right
	 Info / Angle
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Display / Media
	 CH+ / Page+
	 Vol-
	 Fav / Marker / PC
	 CH- / Page-
	 1



