







Original	Sustituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Right	 Right
 Down / P-	 Down
 Down / P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 --	 Guide / EPG / -/--
 0	 0
 P < P	 Fav / Marker / PC
 PP	 Back / Return
 Vol+	 Vol+
 I-II	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [TV]	 Shift + 1
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS
 [≡]	 Text / Goto

 








 

 

 

 
 
 

 



















Original	Sustituto	Original	Sustituto
	[≡☉] Subtitle / EQ		
	[/≡] Picture / Format		
	[≡X] Exit / Cancel / Clear		
	[≡⇕] Zoom / Size		
	[≡?] Display / Media		
	[≡i] Smart / List		





Original	Sustituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Select	 OK
 Right	 Right
 Down / P-	 CH- / Page-
 Down / P-	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 +10	 Guide / EPG / -/-
 0	 0
 Repeat	 Green / APP / Repeat
 Search	 Red / Netflix / Search
 A→B	 Yellow / YouTube / Repeat
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Prog	 TV/Radio /
 C	 Blue / Prime Video / Random
 Angle	 Info / Angle
 Return	 Back / Return
 Time	 Sleep / Timer
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+







































	Original	Sustituto	Original	Sustituto
	⏮	PRESET- ⏮		I<< / Preset-
	⏭	PRESET+ ⏭		>>I / Preset+
	▶/⏸	SLOW ▶		Play / Slow
	▶/⏸	STEP-FREEZE ⏸		Pause / Step / Freeze
	■	HOLD ■		Stop / Hold
	Title	TITLE SOUND		Sound / Title
	Open / Close	SURROUND ⏏		Eject / Surround





Original	Sustituto	
On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Original	Sustituto	
Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Original	Sustituto	Original	Sustituto
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	+ Shift + Audio / Lang I/II		

