

 
 


 
 

 

 
 




 



 







 





 
 
 


 
 
 

 
 
 
 
 

 


 
 
 



 




 


 




Original		Sustituto		Original		Sustituto	
	Power		Power		9		9
	Menu		Menu		0		0
	Exit		Exit		Recall		Back
	Display		Info		Input		AV
	Audio		Dual		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	Picture		Format		CH+		Ch +
	Sound		Shift + Dual		CH-		Ch -
	Sleep		Sleep		Up		Up
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Play		Play
	6		6		Pause		Pause
	7		7		Stop		Stop
	8		8		Eject / Rec		Eject





Original	Sustituto
<< / Hold	<<
>> / Cancel	>>
I<< / Index	I<<
>>I / Size	>>I
Set / CH List	List
D.Menu / List	D. Menu
EPG	Guide
FAV	Pre Ch
Program / TV Text	Text
Program / TV Text	+ Shift + Sleep
Repeat / Subpage	+ Shift + Text
Slow / Reveal	Smart
Subtitle	Subt
Red / Zoom	Red
Red / Zoom	+ Shift + Eject
Green / Title	Green
Yellow / Go To	Yellow

Original	Sustituto
Blue / Screen	Blue

