 




 




 
 


 


 



 
 
 
 
 


 
 
 

 

 
 


 
 


 
 



 
 

 

 


 
 

 

 

 
 

 
 
 




Original	Sustituto	Original	Sustituto
 Power Receiver	 Power	 Audio 1	 1
 Sleep	 Sleep	 Audio 2	 2
 Vol+	 Vol +	 Audio 3	 3
 Vol-	 Vol -	 Audio 4	 4
 Mute	 Mute	 Audio 5	 5
 Return	 Back	 Audio 6	 6
 Enter	 Ok	 HDMI 1	 7
 Up	 Up	 HDMI 2	 8
 Down	 Down	 HDMI 3	 9
 Right	 Right	 Tuner Tuner	 Guide
 Left	 Left	 Memory Tuner	 Pre Ch
 Setup	 Menu	 Preset Up Tuner	 Ch +
 Option	 Options	 Preset Down	 Ch -
 BD/DVD	 Red	 Tuning Up	 >>
 TV	 Green	 Tuning Down	 <<
 CD	 Yellow	 Info	 Info
 Radio	 Blue	 Movie Sound	 Subt





Original	Sustituto	Original	Sustituto
MUSIC Music Sound	SOUND DUAL Dual		
ENHANCER STEREO Stereo/Enhancer Sound	PICTURE FORMAT Format		
STRAIGHT Straight Sound	TIMER AV AV		
SUR. DECODE Sur. Decode	ECO 3D 3D		

