



Original	Sustituto
Standby/On	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Stop	Stop / Hold
Prog/Freq/Text	TV/Radio /

Original	Sustituto
Pause/PTY Seek	Pause / Step / Freeze
Random/PTY Seek Start	Blue / Prime Video / Random
I<</Preset	I<< / Preset-
Play	Play / Slow
>>I/Preset Up	>>I / Preset+
GUI	Smart / List
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Set Up	Setup / OPT /
Down	Down
Top	Back / Return
Top	D.Menu / Top
Mute	Mute / Dimmer
Volume+	Vol+



Program



Original	Sustituto
 Night	 Display / Media
 Volume-	 Vol-
 EQ	 Shift + Subtitle / EQ
 TV	 Shift + 1
 DVD/CD	 Shift + 2
 DVD/CD	 Shift + 3
 Direct	 AV / Input / RDS
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Audio	 Audio / Lang I/II

Original	Sustituto





Original	Sustituto
Power Tv	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV CH+	CH+ / Page+
TV CH-	CH- / Page-
TV Input	AV / Input / RDS
TV Vol+	Vol+
TV Vol-	Vol-
TV	Shift + 1

Original	Sustituto
DVD/CD	Shift + 3
DVD/CD	Shift + 2
AUX	Shift + 7
Tuner	Shift + 6





Original	Sustituto
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog/Freq/Text	 TV/Radio /
 Pause/PTY Seek	 Pause / Step / Freeze
 Random/PTY Seek Start	 Play / Slow
 I<</Preset	 I<< / Preset-
 >>I/Preset Up	 >>I / Preset+
 Mute	 Mute / Dimmer

Original	Sustituto
 Volume+	 Vol+
 Volume-	 Vol-
 TV	 Shift + 1
 DVD/CD	 Shift + 3
 DVD/CD	 Shift + 2
 AUX	 Shift + 7
 Tuner	 Shift + 6



