



Original	Sustituto
	Power
	+ Shift + Mute / Dimmer
	Sleep / Timer
	Guide / EPG / -/--
	Fav / Marker / PC
	7
	8
	3
	1
	2
	4
	6
	5
	9
	TV/Radio /
	+ Shift + << /
	CH- / Page-

Original	Sustituto
	CH+ / Page+
	+ Shift + >> /
	Smart / List
	I<< / Preset-
	>>I / Preset+
	Exit / Cancel / Clear
	Sound / Title
	Display / Media
	Up
	Left
	OK
	Right
	Down
	Menu / Home
	Back / Return
	Setup / OPT /
	Vol+



