






 



 











 
 


 

 
 
 



 
 
 

 
 
 





 

 


 


 
 
 

 




 






 
 
 


Original	Sustituto
 Power	 Power
 Standby	 Shift + Power
 Multi CH In	 Smart
 Audio Sel	 Media
 Sleep	 Sleep
 Mute	 Mute
 CD	 2
 MD/CD-R	 3
 TUNER	 4
 DVD	 5
 DTV/CBL	 6
 DVR	 7
 V-AUX	 8
 USB	 1
 Scene 1	 Red
 Scene 2	 Green
 Scene 3	 Yellow

Original	Sustituto
 Scene 4	 Blue
 Level	 D. Menu
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Return	 Back
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Prog-	 Ch -
 Prog+	 Ch +
 Enhancer	 Shift + 1
 Straight	 Shift + 3
 Sur. Decode	 Shift + 2



 



 

 

 

 
 
 


 




 

 





 

 

 
 
 





 



 

 

 
 


 




 


 
 






Original		Sustituto		Original		Sustituto	
	Power AV		Power		1		1
	Mute		Mute		2		2
	Band		Smart		3		3
	Menu		Menu		4		4
	Preset+		Up		5		5
	Preset-		Down		6		6
	A/B/C/D/E+		Right		7		7
	A/B/C/D/E-		Left		8		8
	Enter		Ok		9		9
	Return		Back		0		0
	Display		Info		ENT		Pre Ch
	Volume+		Vol +				
	Volume-		Vol -				
	Freq / Text		Text				
	EON		Media				
	PTY SEEK Mode		Ch -				
	PTY SEEK Start		Ch +				





 



 

 

 



 

 
 
 



 

 



 

 
 




Original	Sustituto	Original	Sustituto
 Power AV	 Power	 <<	 <<
 Mute	 Mute	 >>	 >>
 Title	 Smart	 <<	 <<
 Menu	 Menu	 >>	 >>
 Up	 Up	 1	 1
 Left	 Left	 2	 2
 Enter	 Ok	 3	 3
 Right	 Right	 4	 4
 Down	 Down	 5	 5
 Return	 Back	 6	 6
 Display	 Info	 7	 7
 Volume+	 Vol +	 8	 8
 Volume-	 Vol -	 9	 9
 Rec	 Rec	 0	 0
 Stop	 Stop	 +10	 Guide
 Pause	 Pause	 ENT	 Pre Ch
 Play	 Play		





Original	Sustituto
 Power AV	 Power
 Mute	 Mute
 Title	 Smart
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause
 Play	 Play

Original	Sustituto
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 ENT	 Pre Ch

