



Original	Sustituto
	Power
	+  Shift + Power
	+  Shift + 3
	+  Shift + 5
	+  Shift + 2
	+  Shift + 1
	+  Shift + 6
	+  Shift + 8
	+  Shift + 7
	+  Shift + 9
	+  Shift + 4
	+  Shift + 0
	Sleep / Timer
	Vol+
	Vol-
	Mute / Dimmer
	1

Original	Sustituto
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / -/-
	Fav / Marker / PC
	Sound / Title
	Menu / Home
	Up
	Left
	OK
	Right









Original	Sustituto
Power	Power
Standby	Shift + Power
CD	Shift + 3
MD/CD-R	Shift + 5
DVD	Shift + 2
DTV/CBL	Shift + 1
Tuner	Shift + 6
Multi CH In	Shift + 8
V-AUX	Shift + 7
DVR	Shift + 9
VCR	Shift + 4
PHONO	Shift + 0
Sleep	Sleep / Timer
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
1	1

Original	Sustituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Title/Level	Sound / Title
Up / Preset+	Up
Up / Preset+	>>  / Preset+
Menu/Set Menu	Menu / Home
Left / A/B/C/D/E-	Left
Enter	OK
Right /	Right



A/B/C/D/E+

