



 
Original	Sustituto
Power	Power
Standby	+ Shift + Power
Sleep	Sleep / Timer
CD	+ 3 Shift + 3
MD/CD-R	+ 5 Shift + 5
DVD	+ 2 Shift + 2
D-TV/CBL	+ 1 Shift + 1
TUNER	+ 6 Shift + 6
Multi CH In	+ 0 Shift + 0
V-AUX	+ 7 Shift + 7
DVR	+ 4 Shift + 4
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
Stereo	1
Music	2
Entertain	3

Original	Sustituto
Movie	4
Standard	5
Select	6
Extd Sur.	7
Direct ST	8
Speakers	9
Enhancer	Guide / EPG / -/--
Night	0
Straight	Fav / Marker / PC
Level	Sound / Title
Up / Preset/CH +	Up
Set Menu	Menu / Home
Left/-	Left
Enter	OK
Right/+	Right
Return	Back / Return
Down / Preset/CH	Down







Original

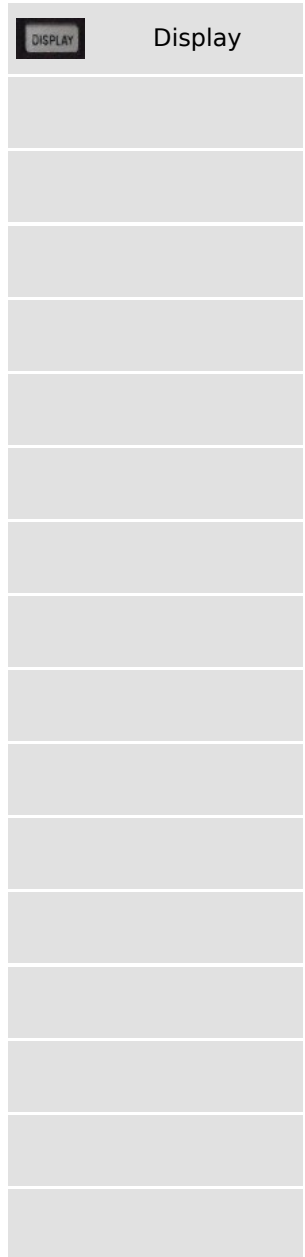

Sustituto

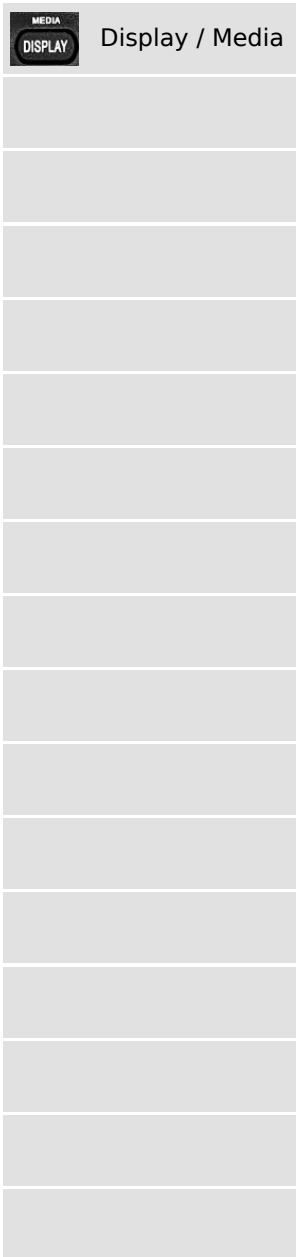 

Original

 

Sustituto





Original	Sustituto
Power	Power
Standby	+ Shift + Power
Sleep	Sleep / Timer
CD	+ Shift + 3
MD/CD-R	+ Shift + 5
DVD	+ Shift + 2
DTV/CBL	+ Shift + 1
Tuner	+ Shift + 6
Multi CH In	+ Shift + 0
V-AUX / Dock	+ Shift + 7
DVR	+ Shift + 4
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
1	1
2	2
3	3

Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Band	Sound / Title
Preset+	Up
Preset+	>> / Preset+
Srch Mode	Menu / Home
Left / A/B/C/D/E-	Left
Enter	OK
Right /	Right
Return	Back / Return
Preset-	Down





	Original	Sustituto	Original	Sustituto
	Preset-	I<< / Preset-		
	Display	Display / Media		
	Freq/Text	Red / Netflix / Search		
	PTY Seek Mode	Yellow / YouTube / Repeat		
	PTY Seek Start	Blue / Prime Video / Random		
	EON	Green / APP / Repeat		

