




 
 












 

 











 





Original	Sustituto
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 Recall	 Pre Ch
 Prime Video	 Shift + Smart
 Home	 Smart
 Q.Menu	 D. Menu

Original	Sustituto
 YouTube	 Shift + Media
 Menu	 Menu
 Up	 Up
 Netflix	 Media
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Exit	 Exit
 Vol+	 Vol +
 Back	 Back
 Vol-	 Vol -
 Guide	 Guide
 Mute	 Mute
 Ch+	 Ch +
 Ch-	 Ch -
 Red	 Red





Original	Sustituto
Green	Green
Yellow	Yellow
Blue	Blue
Index / Play/Pause	Shift + Info
Index / Play/Pause	Play
Index / Play/Pause	Pause
Hold / Stop	Stop
Mix	Shift + Text
Text / I<<	Text
Text / I<<	I<<
Size / >>I	Eject
Size / >>I	>>I
Audio Lang I/II	Dual
Reveal / <<	<<
Cancel / >>	>>
Subtitle	Subt

Original	Sustituto

