



Original	Sustituto	Original	Sustituto
Power	Power	Dn/>>>I	Ch -
Tv-Out	AV	Menu	Menu
1	1	>>	>>
2	2	<<	<<
3	3	Player	Yellow
4	4	Stop	Stop
5	5	Enter	Ok
6	6	Right	Right
7	7	Left	Left
8	8	Up	Up
9	9	Down	Down
0	0	Mute	Mute
Subtitle	Subt	Zoom	Shift + Eject
Audio	Dual	Repeat	Text
Vol+	Vol +	Setup	Options
Vol-	Vol -	Display	Shift + Info
Up/ <<	Ch +	Rotate	Back





	Original	Sustituto	Original	Sustituto
	S-Time	Sleep		
	S-Mode	Info		
	Movie	Guide		
	Music	Pre Ch		
	Photo	+  Shift + Options		
	File	Eject		
	TV-Out	TV/R		

