













 





 

 

 

 

 

 







| Original  | Sustituto   |
|---|---|
|    |  Power               |
|    |  Info / Angle        |
|    |  Mute / Dimmer       |
|    |  1                   |
|    |  2                   |
|    |  3                   |
|    |  4                   |
|    |  5                   |
|    |  6                   |
|    |  7                   |
|   |  8                  |
|  |  9                 |
|  |  AV / Input / RDS  |
|  |  0                 |
|  |  Audio / Lang I/II |
|  |  Picture / Format  |
|  |  Back / Return     |

| Original  | Sustituto  |
|---|--|
|    |  Menu / Home              |
|    |  Exit / Cancel / Clear    |
|    |  Up                       |
|    |  Left                     |
|    |  OK                       |
|    |  Right                    |
|    |  Vol+                     |
|    |  Down                     |
|    |  CH+ / Page+              |
|    |  Vol-                     |
|   |  CH- / Page-             |
|  |  Smart / List           |
|  |  Sleep / Timer          |
|  |  Guide / EPG / -/-      |
|  |  Fav / Marker / PC      |
|  |  << / Tune-             |
|  |  Red / Netflix / Search |



