Mandis shop

Samsung AH59-00134B

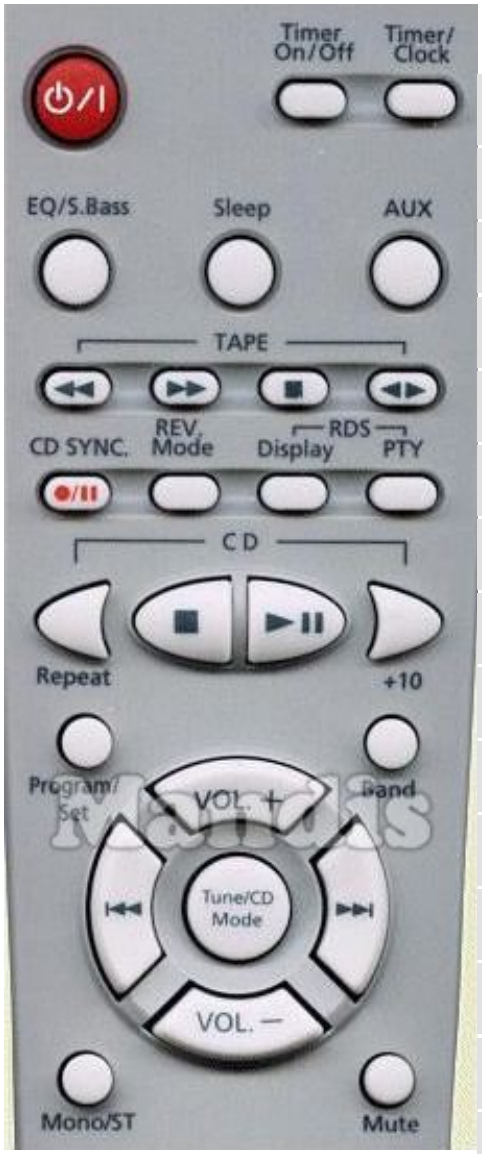

Original		Substitut	
	POWER		Power
	PROGRAM/SET		MEDIA
	MUTE		MUTE
	CD SYNC, REC		Rec
	BAND		VOD
	REPEAT		INFO
	EQ/S. BASS		SRC
	SLEEP		EXIT
	TUNE/CD Mode		P/C / FAV
	I<< CD, TUN		First
	+10		-/-- / EPG
	DISPLAY RDS		TV/R
	STOP TAPE		Yellow (C)
	VOL+		VOL +
	TIMER/CLOCK		WIDE
	PTY RDS		Subt.
	VOL-		VOL -

Original		Substitut	
	>>I CD, TUN UP		Last
	PLAY/PAUSE CD		Play
	MONO/ST		Audio
	TIMER ON/OFF		V-FOR
	<< TAPE		Rewind
	STOP CD		Stop
	>> TAPE		Fast Forward
	<> TAPE		Pause
	REV MODE		Red (A)
	AUX		MENU

https://mandisdistance.com/Samsung/1036-882-samsung-remote-control-substitution-for-Samsung-AH59-00134B.htm