Mandis shop

Sharp RRMCG0219AWSA

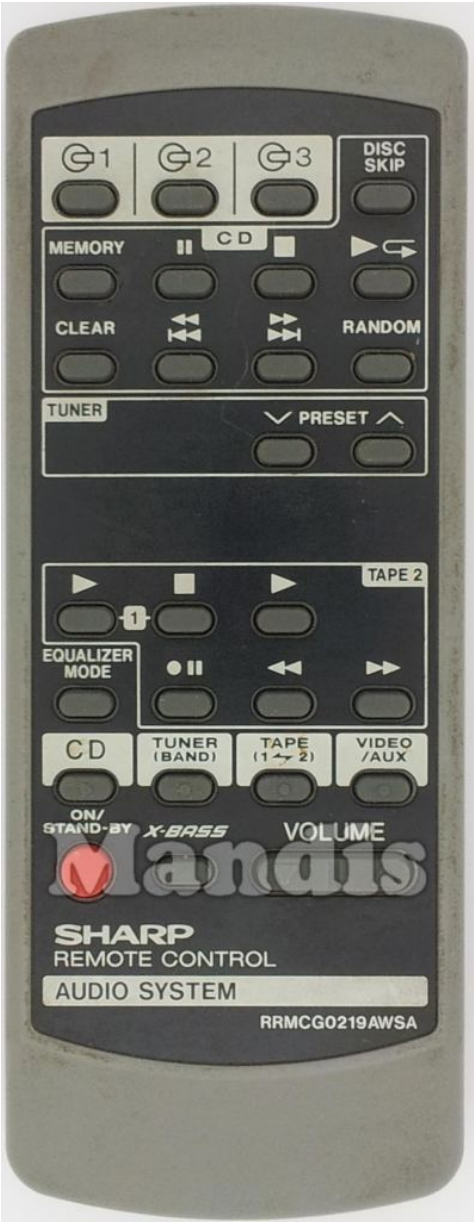

Original	Substitut	Original	Substitut
On/Standby	Power	Preset Down	Ch -
Vol-	Vol -	Preset Up Tuner	Ch +
Vol+	Vol +	<< Tape2	<<
CD	Red	>> Tape2	>>
Tuner/Band	Green	Play 1 Tape	Left
Tape (1-2)	Yellow	Stop 1 Tape	Ok
Video/AUX	Blue	Play Tape2	Right
Equalizer Mode	Dual	Rec/Pause	Down
X-Bass	Subt	Disc 1 CD	1
Play/Back CD	Play	Disc 2 D	2
Stop CD	Stop	Disc 3 CD	3
Pause CD	Pause	Memory CD	Menu
<<|<< CD	|<<		
>>|>> CD	>>|		
Clear CD	Exit		
Random CD	Media		
Disc Skip CD	Smart		

https://mandos-a-distancia.es/ca/Sharp/1039458-2478-comandament-de-substitucio-per-Sharp-RRMCG0219AWSA.html