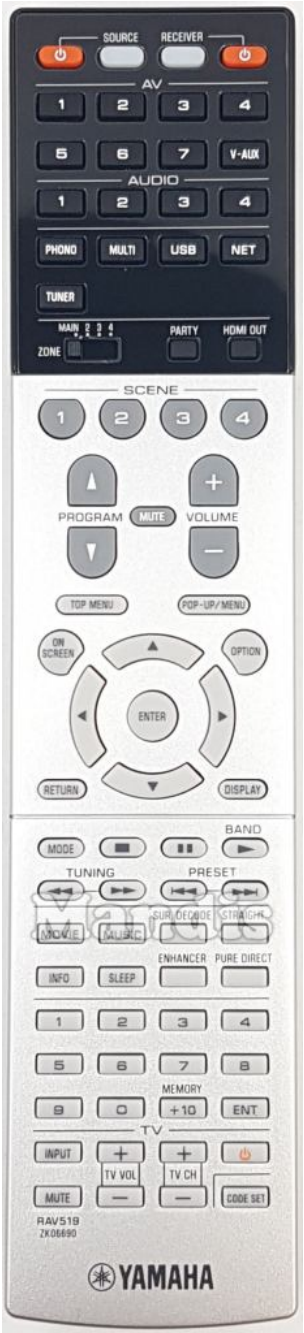

Original	Substitut
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
Multi	Shift + Green / APP /
USB	Shift + Blue / Prime Video / Random

Original	Substitut
Net	Shift + Smart / List
Tuner	Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Program Up	CH+ / Page+
Program Down	CH- / Page-
Volume+	Vol +
Volume-	Vol -
Mute	Mute / Dimmer
Top Menu	D.Menu / Top Tools
Pop-Up Menu	Menu / Home
On Screen	Zoom / Size
Option	Setup / OPT /

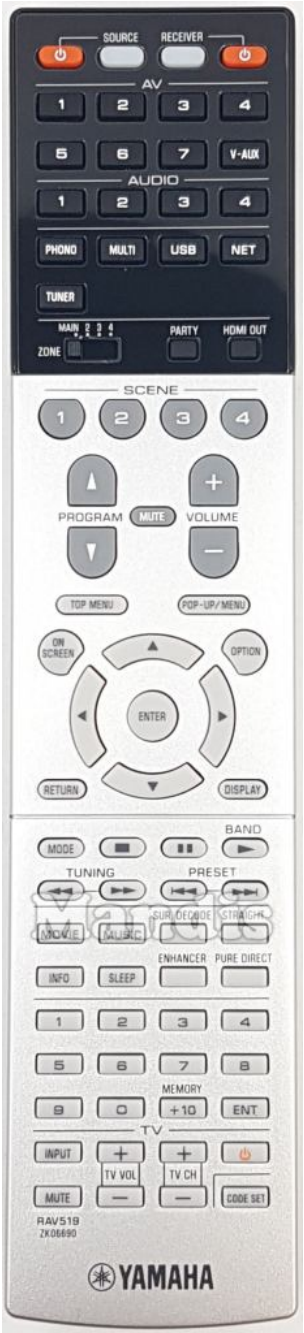

Original		Substitut	
RETURN	Return	RETURN BACK	Back / Return
DISPLAY	Display	MEDIA DISPLAY	Display / Media
▲	Up	▲	Up
▼	Down	▼	Down
▶	Right	▶	Right
◀	Left	◀	Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
■	Stop	HOLD ■	Stop / Hold
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze
BAND ▶	Play/Band	SLOW ▶	Play / Slow
TUNING ◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-
TUNING ▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+
PRESET ◀◀	I<< Preset	PRESET- ◀◀	I<< / Preset-
PRESET ▶▶	Preset >>I	PRESET+ ▶▶	>>I / Preset+
MOVIE	Movie	EQ SUBTITLE	Subtitle / EQ
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II

Original		Substitut	
SUR. DECODE	Sur Decode	SURROUND ⏏	Eject / Surround
STRAIGHT	Straight	TITLE SOUND	Sound / Title
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
ENHANCER	Enhancer	GOTO TEXT	Text / Goto
PURE DIRECT	Pure Direct	PROGRAM TV/RADIO	TV/Radio /
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--

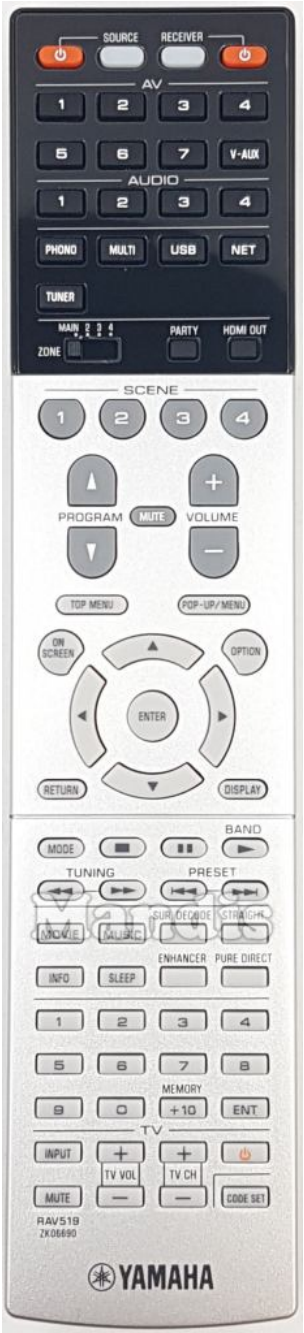

Original	Substitut	Original	Substitut
ENT.	Fav / Marker / PC		

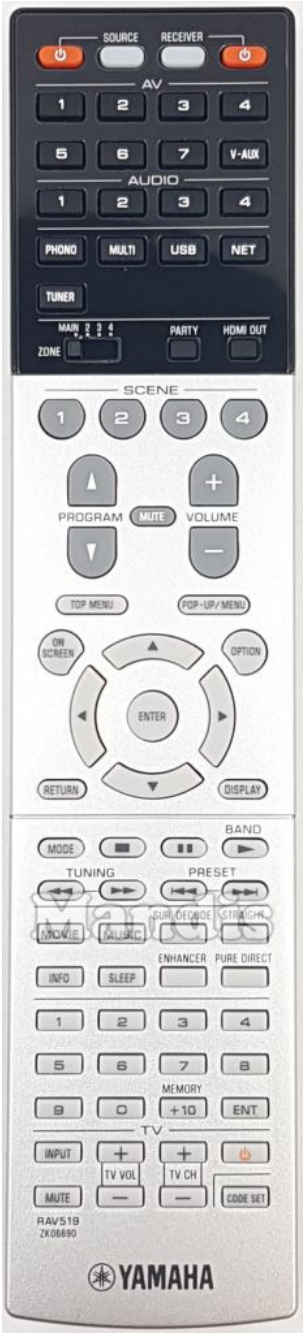

Original	Substitut
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
Net	Shift + Smart / List
USB	Shift + Blue / Prime Video / Random

Original	Substitut
Tuner	Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Mute	Mute / Dimmer
Volume+	Vol +
Volume-	Vol -
Pop-Up Menu	Menu / Home
Top Menu	D.Menu / Top
Option	Setup / OPT /
Display	Display / Media
Return	Back / Return
On Screen	Zoom / Size
Up	Up

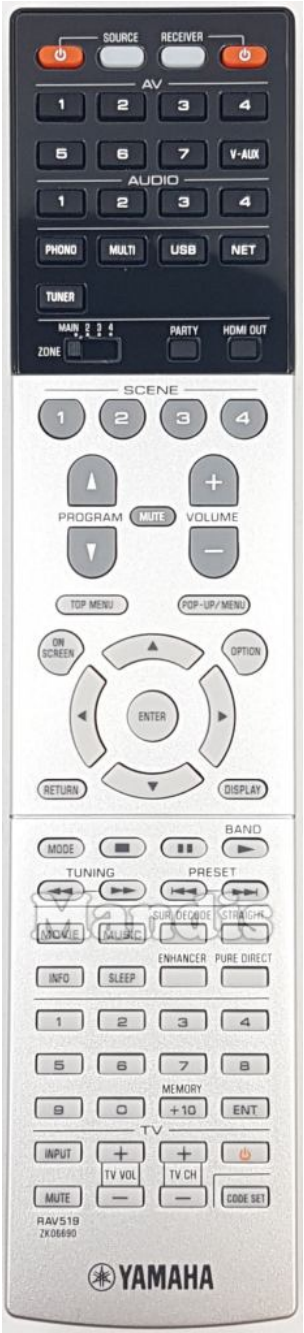

Original		Substitut	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Substitut	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

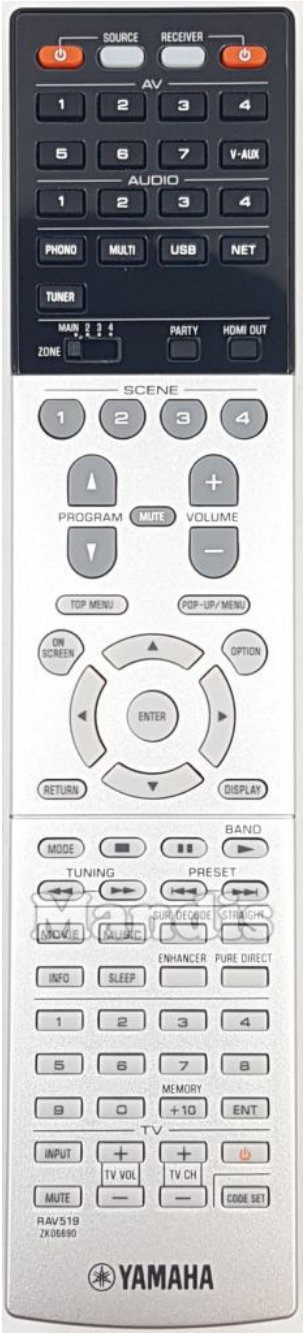

Original	Substitut
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
USB	Shift + Blue / Prime
Net	Shift + Smart / List

Original	Substitut
Tuner	Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Volume+	Vol +
Volume -	Vol -
Mute	Mute / Dimmer
Pop-Up Menu	Menu / Home
Top Menu	D.Menu / Top
Info	Info / Angle
Option	Setup / OPT /
Return	Back / Return
On Screen	Zoom / Size
Enter	OK

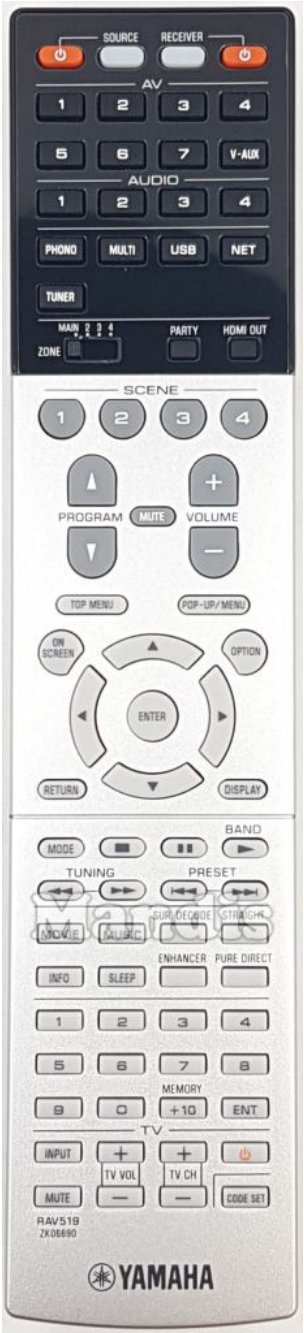

Original		Substitut	
DISPLAY	Display	MEDIA DISPLAY	Display / Media
▲	Up	▲	Up
▼	Down	▼	Down
▶	Right	▶	Right
◀	Left	◀	Left
MODE	Mode	FORMAT PICTURE	Picture / Format
■	Stop	HOLD ■	Stop / Hold
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze
BAND ▶	Play/Band	SLOW ▶	Play / Slow
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+
⏮	I<< Preset	PRESET- ⏮	I<< / Preset-
⏭	Preset >>I	PRESET+ ⏭	>>I / Preset+
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Substitut	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

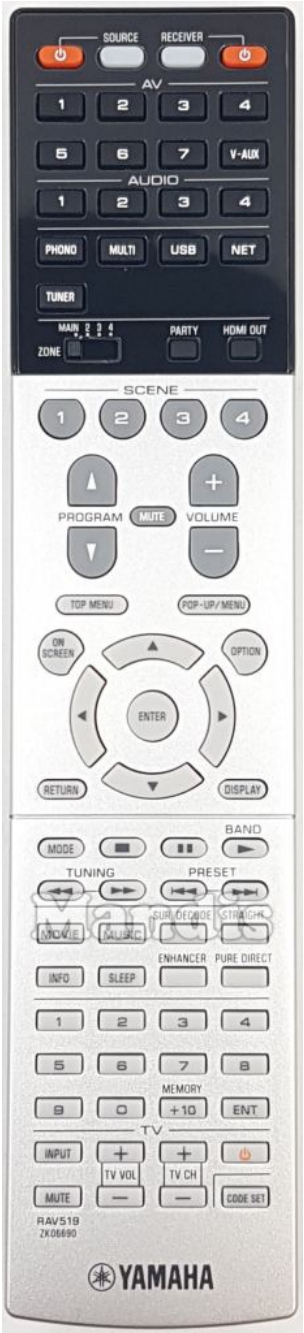

Original	Substitut
Power Receiver	Power
Power Source	SHIFT + Power — Shift + Power
AV1	SHIFT + 1 — Shift + 1
AV2	SHIFT + 2 — Shift + 2
AV3	SHIFT + 3 — Shift + 3
AV4	SHIFT + 4 — Shift + 4
AV5	SHIFT + 5 — Shift + 5
AV6	SHIFT + 6 — Shift + 6
AV7	SHIFT + 7 — Shift + 7
V-AUX	SHIFT + 8 — Shift + 8
Audio 1	SHIFT + 9 — Shift + 9
Audio 2	SHIFT + GUIDE EPG — Shift + Guide / EPG / -/--
Audio 3	SHIFT + 0 — Shift + 0
Audio 4	SHIFT + FAV MARKER — Shift + Fav / Marker / PC
Phono	SHIFT + NETFLIX SEARCH — Shift + Red / Netflix /
USB	SHIFT + Prime Video RANDOM — Shift + Blue / Prime
Net	SHIFT + SMART — Shift + Smart / List

Original	Substitut
Tuner	SHIFT + YouTube REPEAT A-B — Shift + Yellow / YouTube /
Party	SMART — Smart / List
HDMI Out	AV INPUT — AV / Input / RDS
Scene 1	NETFLIX SEARCH — Red / Netflix / Search
Scene 2	APP REPEAT — Green / APP / Repeat
Scene 3	YouTube REPEAT A-B — Yellow / YouTube / Repeat
Scene 4	Prime Video RANDOM — Blue / Prime Video / Random
Volume+	VOL + — Vol +
Volume-	VOL − — Vol -
Mute	DIMMER MUTE — Mute / Dimmer
Top Menu	D.MENU — D.Menu / Top
Pop-Up Menu	MENU — Menu / Home
On Screen	ZOOM — Zoom / Size
Option	SETUP — Setup / OPT /
Return	BACK — Back / Return
Display	DISPLAY — Display / Media
Up	Up

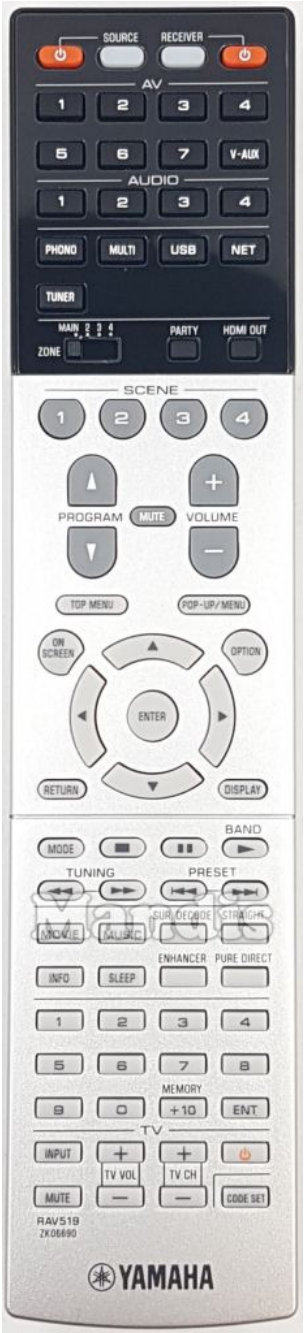

Original		Substitut	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Substitut	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC