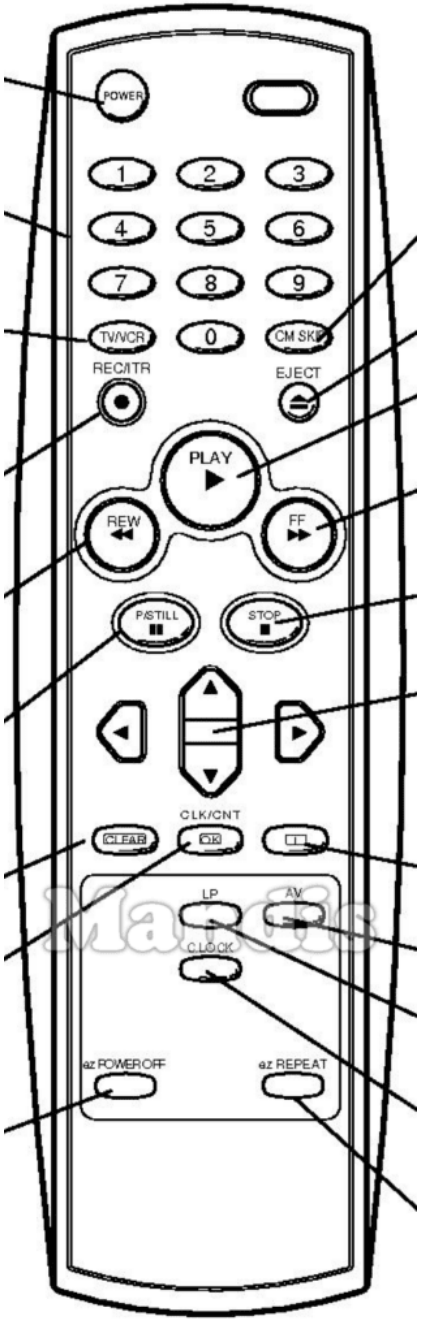

Original		Substitut	
POWER	Power	POWER	Power
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
TV/VCR	TV/VCR	LIST SMART	Smart / List
0	0	HDMI-SAT 0	0
CM SKIP	CM-Skip	MEDIA DISPLAY	Display / Media
REC/ITR	REC / ITR	REC MODE	Rec / Rec Mode
EJECT	Eject	SURROUND	Eject / Surround
PLAY	Play	SLOW	Play / Slow
REW	<< REW	TUNE-	<< / Tune-

Original		Substitut	
REW	<< REW	PRESET-	I<< / Preset-
FF	>> FWD	TUNE+	>> / Tune+
FF	>> FWD	PRESET+	>>I / Preset+
P/STILL	Pause/Still	STEP-FREEZE	Pause / Step / Freeze
STOP	Stop	HOLD	Stop / Hold
	Left		Left
	Up		Up
	Right		Right
	Down		Down
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
CLK/CNT OK	OK / CLK / CNT	OK	OK
	i	ANGLE INFO	Info / Angle
LP	LP	GOTO TEXT	Text / Goto
AV	AV	RDS AV INPUT	AV / Input / RDS
CLOCK	C. Lock	PROGRAM TV/RADIO	TV/Radio /

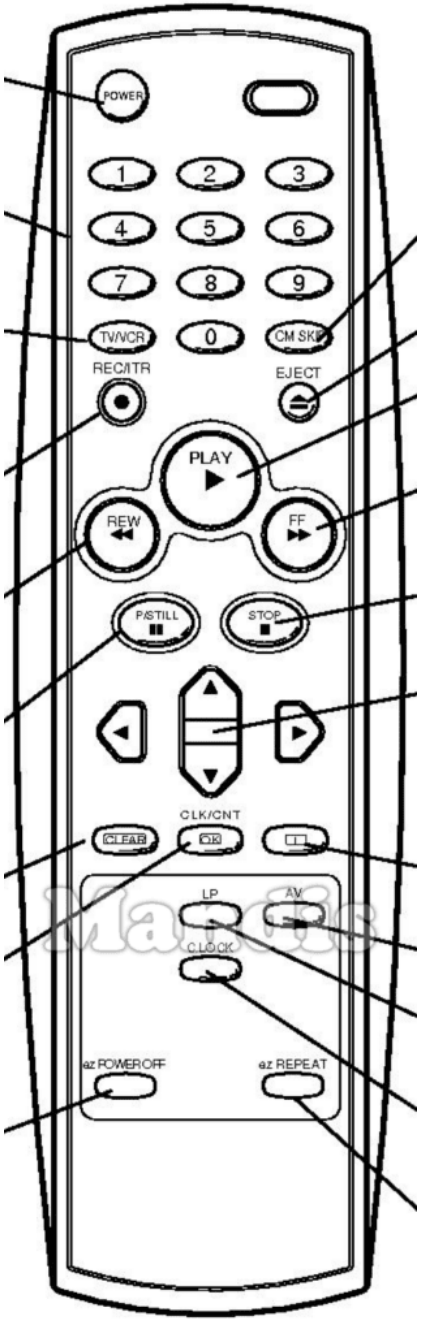

Original	Substitut	Original	Substitut
On/Off	Power	Auto/Track	D. Menu / Top
Audio Out	Mute / Dimmer	T. Set/Clock	Setup / OPT /
Play	Play / Slow	Video/Go-To	Text / Goto
Pause	Pause / Step / Freeze	Input Source	AV / Input / RDS
Stop	Stop / Hold	Menu	Menu / Home
Record	Rec / Rec Mode	Menu Up	Up
Rewind	<< / Tune-	Menu Left	Left
F. Forward	>> / Tune+	OK Enter	OK
Prev.	I << / Preset-	Menu Right	Right
Next	>>I / Preset+	Exit	Exit / Cancel / Clear
F. Adv	Sound / Title	Menu Down	Down
Audio	Audio / Lang I/II	Slow/Dpss+	Vol +
Case Tape	Eject / Surround	VCR/TV	Smart / List
Mon/TV	Picture / Format	Tracking+	CH+ / Page+
Sp/Lp/Speed	Zoom / Size	Slow/Dpss-	Vol -
Timer/Sleep	Sleep / Timer	Display	Display / Media
Progr/C/CH	TV/Radio / Program	Tracking-	CH- / Page-

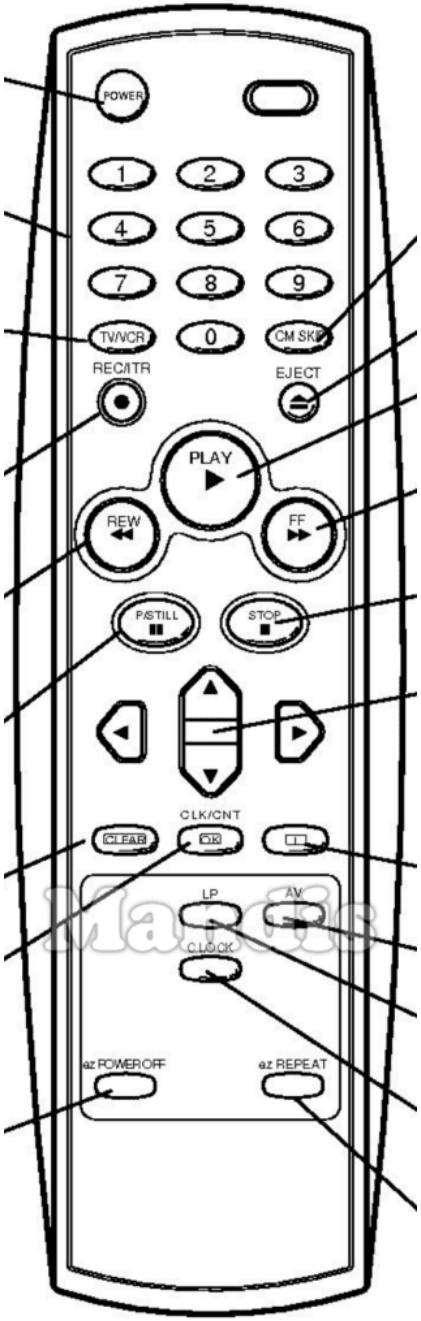

Original	Substitut	Original	Substitut
1	TV 1		
2	DVD 2		
3	CD - STB 3		
4	VIDEO 4		
5	TAPE 5		
6	TUNER 6		
7	AUX - HDD 7		
8	USB 8		
9	BLUETOOTH 9		
- / - -	-/-- GUIDE EPG Guide / EPG / - / - -		
0	HDMI - SAT 0		
Ch. Memo	PC FAV MARKER Fav / Marker / PC		
Repeat	APP REPEAT Green / APP / Repeat		
Slow Down	SHIFT + SLOW Shift + Play /		
Clear 00: 00	SHIFT + CLEAR EXIT CANCEL Shift + Exit / Cancel / Clear		
Index Pict+	SHIFT + CH PAGE + Shift + CH+ /		
Index Pict-	SHIFT + CH PAGE − Shift + CH- / Page-		

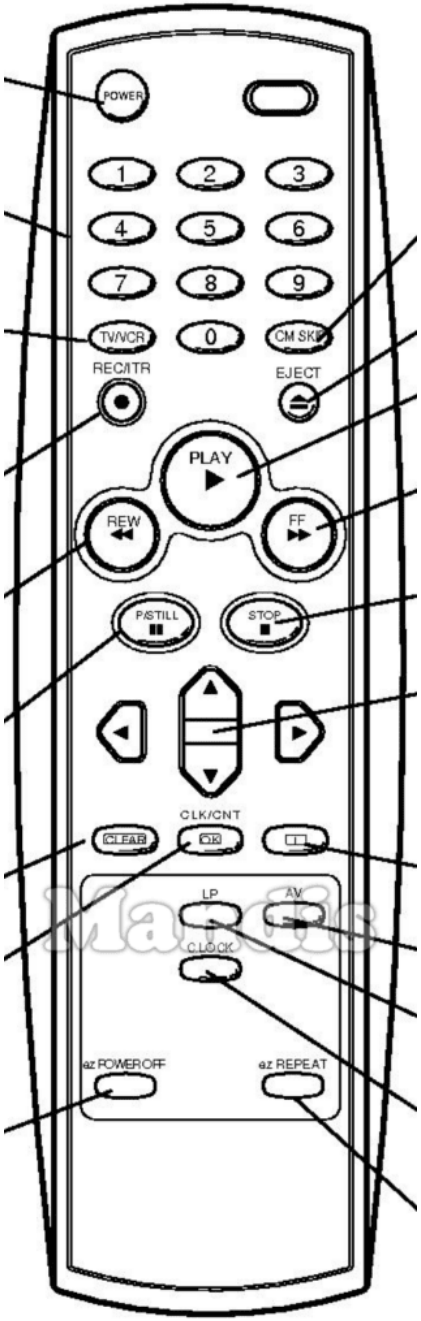

Original	Substitut	Original	Substitut
On/Off	Power	Progr/C/CH	TV/Radio /
Audio Out	Mute / Dimmer	Auto/Track	D.Menu / Top
Play	Play / Slow	T.Set/Clock	Setup / OPT /
Pause	Pause / Step / Freeze	Video/Go-To	Text / Goto
Stop	Stop / Hold	Input Source	AV / Input / RDS
Record	Rec / Rec Mode	Menu	Menu / Home
Rewind	<< / Tune-	Menu Up	Up
F.Forward	>> / Tune+	Show View	Info / Angle
Prev.	I<< / Preset-	Menu Left	Left
Next	>>I / Preset+	OK Enter	OK
Audio Dub	Sound / Title	Menu Right	Right
Audio	Audio / Lang I/II	Exit	Exit / Cancel / Clear
Rec/Mode	Subtitle / EQ	Menu Down	Down
Eject/Reverse	Eject / Surround	F.Adv	Back / Return
Mon/TV	Picture / Format	Slow/Dpss+	Vol +
Sp/Lp/Speed	Zoom / Size	VCR/TV	Smart / List
Timer/Record	Sleep / Timer	Chan+	CH+ / Page+

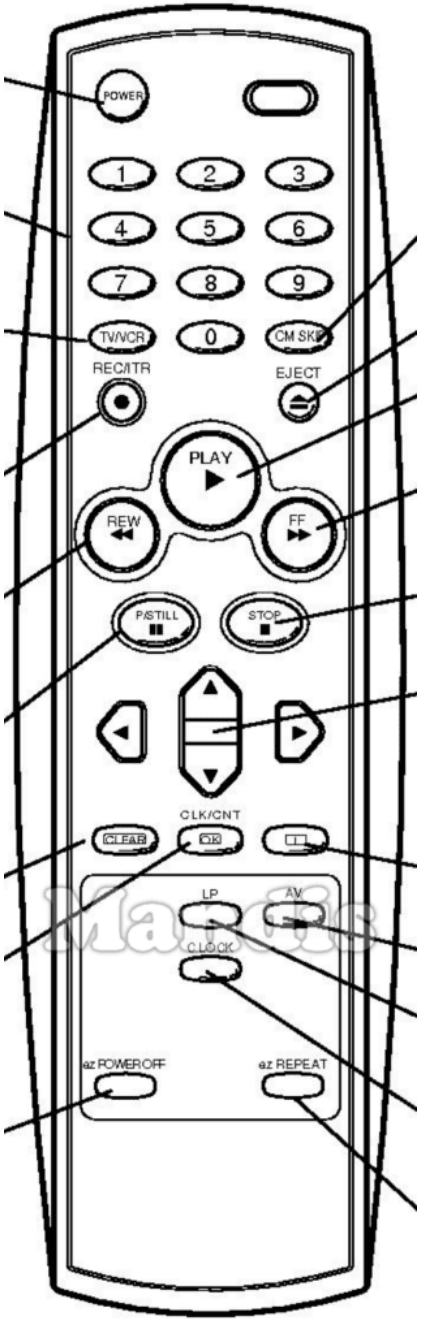

Original	Substitut	Original	Substitut
Slow/Dpss-	VOL – Vol -	Counter Stop	YouTube / REPEAT A-B Yellow / YouTube / Repeat
Display	MEDIA DISPLAY Display / Media	Counter Reset	Prime Video / RANDOM Blue / Prime Video / Random
Chan-	CH PAGE – CH- / Page-	Slow Down	SHIFT + SLOW Shift + Play /
1	TV 1 1	Rec. On/Off	SHIFT + REC MODE Shift + Rec / Rec Mode
2	DVD 2 2	X2 Rew/Play	SHIFT + TUNE- Shift + << /
3	CD-STB 3 3	Frame Down	SHIFT + PRESET- Shift + I<< / Preset-
4	VIDEO 4 4	Frame Up	SHIFT + PRESET+ Shift + >>I / Preset+
5	TAPE 5 5	Index Pict+	SHIFT + Shift + Up
6	TUNER 6 6	Set-	SHIFT + Shift + Left
7	AUX-HDD 7 7	Set+	SHIFT + Shift + Right
8	USB 8 8	Index Pict-	SHIFT + Shift + Down
9	BLUETOOTH 9 9	Otr/A.Otr	SHIFT + LIST SMART Shift + Smart / List
-/--	-/-- GUIDE EPG Guide / EPG / -/--	Tracking+	SHIFT + + CH PAGE Shift + CH+ /
0	HDMI-SAT 0 0	Vps/Pdc	SHIFT + MEDIA DISPLAY Shift + Display / Media
Ch. Memo	PC FAV MARKER Fav / Marker / PC	Tracking-	SHIFT + CH PAGE – Shift + CH- /
Counter Clock	NETFLIX SEARCH Red / Netflix / Search	Search Index	SHIFT + NETFLIX SEARCH Shift + Red / Netflix /
Count Remain	APP REPEAT Green / APP / Repeat		