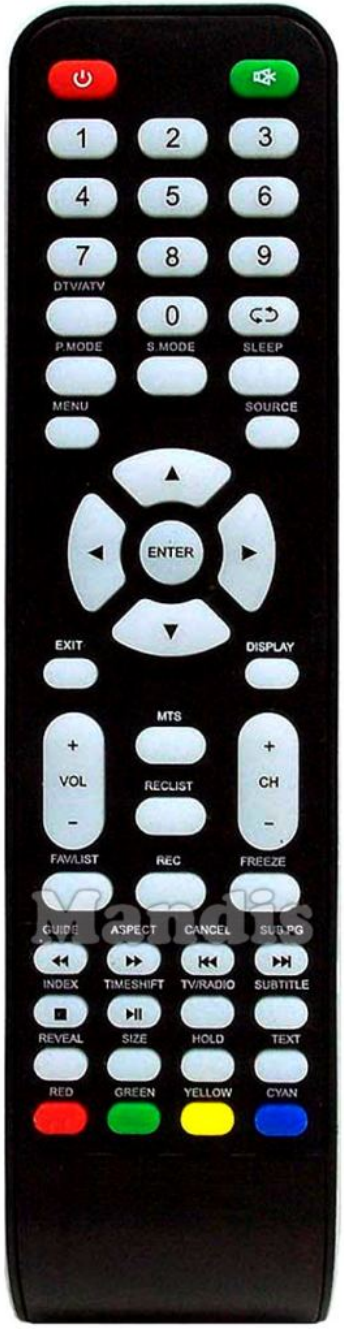

Original		Replacement	
POWER	Power	POWER	Power
MUTE	Mute	MUTE	MUTE
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
DTV/ATV	DTV/ATV	VOD	VOD
RECALL	Recall	BACK	BACK
SLEEP	Sleep	MEDIA	MEDIA
MENU	Menu	MENU	MENU
EXIT	Exit	EXIT	EXIT

Original		Replacement	
DISPLAY	Display	WIDE	WIDE
SOURCE	Source	SRC	SRC
ENTER	Enter	OK	OK
FAV.LIST	FAV/List	FAV 2. P/C	P/C / FAV
REC	Rec	REC	Rec
FREEZE	Freeze	II	Pause
MTS	MTS	INFO	INFO
GUIDE	<<	<<	Rewind
GUIDE	Guide	EPG 1. -/--	-/-- / EPG
ASPECT	>>/ Aspect	>>	Fast Forward
CANCEL	I <</ Cancel	I<<	First
SUB.PG	>>I / Sub. PG	>>I	Last
INDEX	Stop/ Index	STOP	Stop
TIMESHIFT	Play/ Pause/ Timeshift	PLAY	Play
TV/RADIO	Tv/ Radio	TV/R	TV/R
SUBTITLE	Subtitle	SUBT.	Subt.
REVEAL	Reveal	OPT+	OPT+

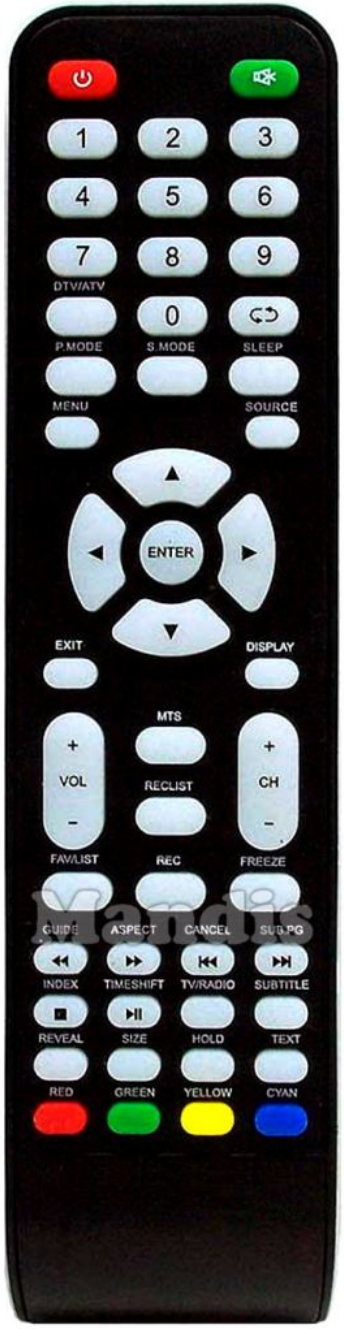

Original		Replacement	
SIZE	Size	V-FOR	V- FOR
TEXT	Text	TEXT	TEXT
S.MODE	S. Mode		Audio
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
CH+	CH+	CH +	CH +
CH-	CH-	CH -	CH -
VOL +	Vol +	VOL +	VOL +
VOL -	Vol -	VOL -	VOL -
YELLOW	Yellow	C	Yellow (C)
RED	Red	A	Red (A)
GREEN	Green	B	Green (B)
CYAN	Cyan	D	Blue (D)
P.MODE	P. Mode	SHIFT + V-FOR	Shift + V- FOR
RECLIST	Rec List	SHIFT + FAV 2. P/C	Shift + P/C / FAV

Original		Replacement	
HOLD	Hold	SHIFT +	Shift + Audio