Original		Replacement		Original	Replacement
	Power		Power		
BACK	Back	RETURN BACK	Back		
SMART	Home/Smart	TOP MENU MENU	Menu		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK	OK	Ok		
3D	3D	ECO 3D	3D		
	Mute	MUTE	Mute		
	Vol+	+ VOL	Vol +		
	Vol-	VOL −	Vol -		
P	Pr+	+ CH	Ch +		
P	Pr-	CH −	Ch -		
	Wheel Up	2	2		
	Wheel Down	5	5		

Original	Replacement
Power	Power
Wheel Down	SHIFT + ▼ Shift + Down
OK	OK
Up	▲ Up
Down	▼ Down
Wheel Up	SHIFT + ▲ Shift + Up
Right	▶ Right
Left	◀ Left
Back	RETURN BACK Back
Home / Smart	HOME SMART Smart
3D	ECO 3D 3D
123 / Q.Menu	SHIFT + OK Shift + Ok
Vol +	+ VOL Vol +
Vol -	VOL − Vol -
Mute	MUTE Mute
P +	+ CH Ch +
P -	CH − Ch -

Original	Replacement
Ratio	PICTURE FORMAT Format
List	DISC NAV LIST List
Q.Menu	SHIFT + TOP MENU MENU Shift + Menu
Subtitle	AD SUBT Subt
Settings	SHIFT + SETTINGS OPT Shift + Options
AD / PIP	SOUND DUAL Dual
>>	» >>
>>	»I >>I
Play	PLAY MODE ▶ Play
<<	« <<
<<	«I I<<
Rec	REC MODE ● Rec
Pause	❚❚ Pause
Stop / Live TV	■ Stop
AV Mode	SHIFT + TIMER AV Shift + AV
Text	REPEAT TEXT Text
FAV	SHIFT + FAV PRE-CH Shift + Pre Ch

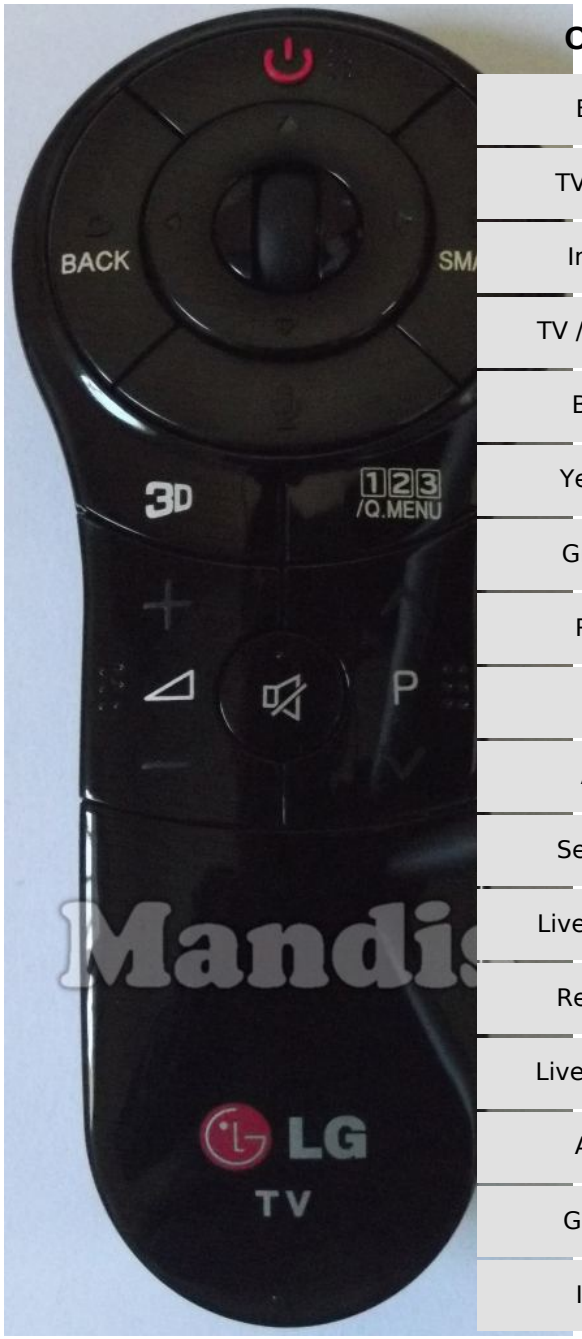

Original	Replacement
Exit	CLEAR EXIT
TV / PC	SHIFT + HOME SMART (Shift + Smart)
Input	TIMER AV
TV / Radio	SEARCH TV/R
Blue	D
Yellow	C
Green	B
Red	A
0	0
AD	SHIFT + AD SUBT (Shift + Subt)
Search	SHIFT + SEARCH TV/R (Shift + TV/R)
Live Menu	TOP MENU MENU
Recent	FAV PRE-CH
Live Zoom	ZOOM ⏏
App	SHIFT + APP MEDIA (Shift + Media)
Guide	-/-- GUIDE
Info	DISPLAY INFO

Original	Replacement
T.Opt	SETTINGS OPT
Q.View	E-MANUAL D.MENU
Energy Saving	SHIFT + ECO 3D (Shift + 3D)
9	9
8	8
7	7
6	6
5	5
4	4
3	3
2	2
1	1
My APPS	APP MEDIA