Mandis shop

QUESTAR DV900

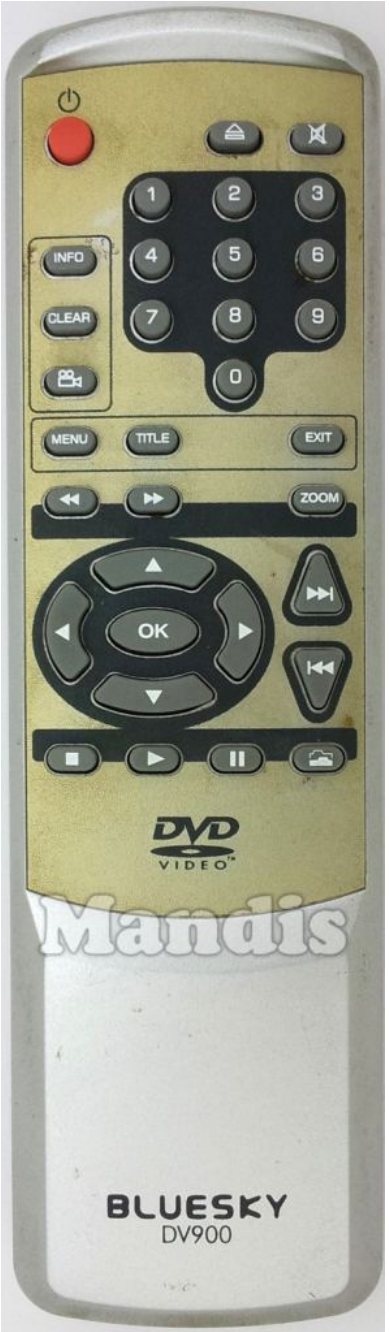

Original	Sustituto	Original	Sustituto
Power	Power	Title	Sound / Title
Open/Close	Eject / Surround	Exit	Exit / Cancel / Clear
Mute	Mute / Dimmer	<<	<< / Tune-
1	1	>>	>> / Tune+
2	2	Zoom	Zoom / Size
3	3	Left	Left
Info	Info / Angle	Up	Up
4	4	Right	Right
5	5	>>I	>>I / Preset+
6	6	OK	OK
Clear	Shift + Exit / Cancel / Clear	Down	Down
7	7	I <<	I << / Preset-
8	8	Stop	Stop / Hold
9	9	Play	Play / Slow
Video	Shift + 4	Pause	Pause / Step / Freeze
0	0	≡	D. Menu / Top
Menu	Menu / Home		

https://mandisdistribuidores.es/1079-833-mando-sustituto-para-QUESTAR-DV900.html