Mandis shop

RM-SED2

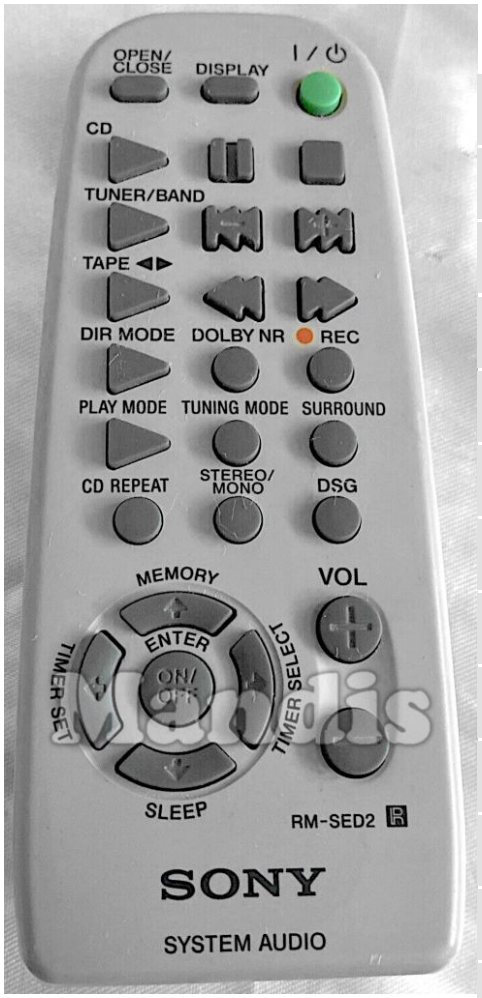

Original	Sustituto
OPEN/ CLOSE Open/Close	SURROUND Eject / Surround
DISPLAY Display	MEDIA DISPLAY Display / Media
Power	Power
CD Play CD	SLOW Play / Slow
CD Play CD	CD - STB 3 3
Pause	STEP - FREEZE Pause / Step / Freeze
Stop	HOLD Stop / Hold
TUNER/BAND Play	PROGRAM TV/ RADIO TV/Radio /
TUNER/BAND Play	TUNER 6 6
I<< / Preset-	PRESET- I<< / Preset-
>>I / Preset+	PRESET+ >>I / Preset+
TAPE Play / Rev Tape	SHIFT + SLOW Shift + Play /
TAPE Play / Rev Tape	TAPE 5 5
<<	TUNE- << / Tune-
>>	TUNE+ >> / Tune+
DIR MODE Dir Mode	RETURN BACK Back / Return
DOLBY NR Dolby NR	TITLE SOUND Sound / Title

Original	Sustituto
REC Rec	REC MODE Rec / Rec Mode
PLAY MODE Play Mode	HOME MENU Menu / Home
TUNING MODE Tuning Mode	TOP MENU D.MENU D.Menu / Top
SURROUND Surround	SHIFT + SURROUND Shift + Eject / Surround
SURROUND Surround	EQ SUBTITLE Subtitle / EQ
CD REPEAT CD Repeat	APP REPEAT Green / APP / Repeat
STEREO/ MONO Stereo / Mono	LANG I/II AUDIO Audio / Lang I/II
DSG DSG	OPT-TOOLS SETUP Setup / OPT /
MEMORY Up/Memory	Up
VOL Vol+	VOL Vol+
TIMER SET Left/Timer Set	Left
ENTER ON/ OFF Enter/On/Off	OK OK
TIMER SELECT Right/Timer	Right
Vol-	VOL Vol-
SLEEP Down/Sleep	TIMER SLEEP Sleep / Timer
SLEEP Down/Sleep	Down

https://mandos-a-distancia.es/es/Sony/1066935-46141-mando-de-sustitucion-para-Sony-RM-SED2.html