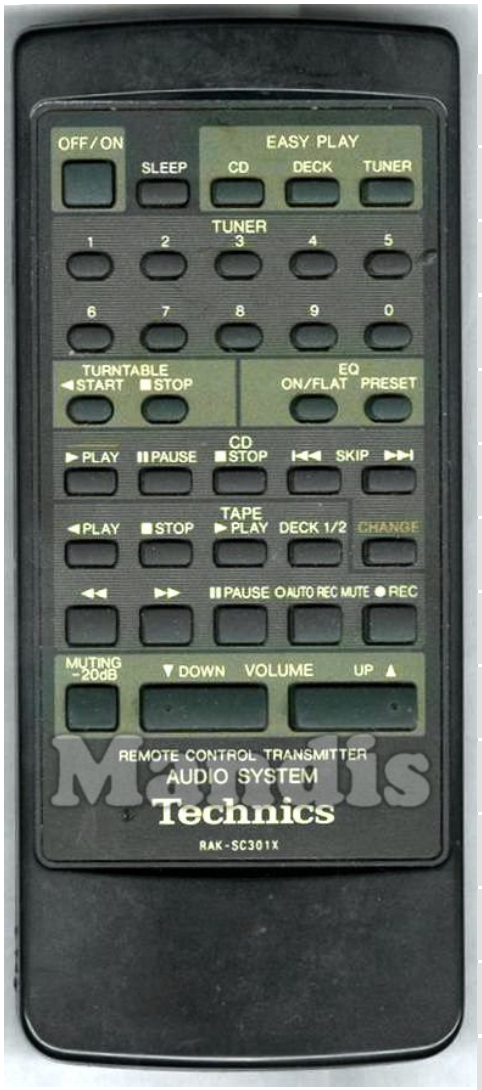

Original		Sustituto	
OFF/ON	Off / On		Power
ON/FLAT EQ	On Flat EQ	MEDIA DISPLAY	Display / Media
EQ PRESET	Preset EQ	LIST SMART	Smart / List
MUTING -20dB	Muting -20dB	DIMMER MUTE	Mute / Dimmer
PLAY	CD Play	SLOW	Play / Slow
PAUSE	CD Pause	STEP-FREEZE	Pause / Step / Freeze
CD STOP	CD Stop	HOLD	Stop / Hold
	Tape <<	TUNE-	<< / Tune-
	Tape >>	TUNE+	>> / Tune+
SKI	CD I <<	PRESET-	I << / Preset-
SKIP	CD >>I	PRESET+	>>I / Preset+
DECK 1/2	Tape Deck 1 /	LANG I/II AUDIO	Audio / Lang I/II
SLEEP	Sleep	FORMAT PICTURE	Picture / Format
TURNTA START	Turntable Play Reverse		Left
NTABLE STOP	Turntable Stop	OK	OK
UP	Volume Up	+ VOL	Vol +
DOWN	Volume Down	VOL −	Vol -

Original		Sustituto	
1	Tuner 1	TV 1	1
2	Tuner 2	DVD 2	2
3	Tuner 3	CD-STB 3	3
4	Tuner 4	VIDEO 4	4
5	Tuner 5	TAPE 5	5
6	Tuner 6	TUNER 6	6
7	Tuner 7	AUX-HDD 7	7
8	Tuner 8	USB 8	8
9	Tuner 9	BLUETOOTH 9	9
0	Tuner 0	HDMI-SAT 0	0
PLAY	Tape Play		Right
PAUSE	Tape Pause	SHIFT + STEP-FREEZE	Shift + Pause / Step /
STOP	Tape Stop	SHIFT + HOLD	Shift + Stop /
CHANGE	CD Program	SHIFT + FORMAT PICTURE	Shift + Picture / Format
PLAY	Tape Play	SHIFT +	Shift + Left
CD	Easy Play CD	SHIFT + TV 1	Shift + 1
DECK	Easy Play Deck	SHIFT + TAPE 5	Shift + 5

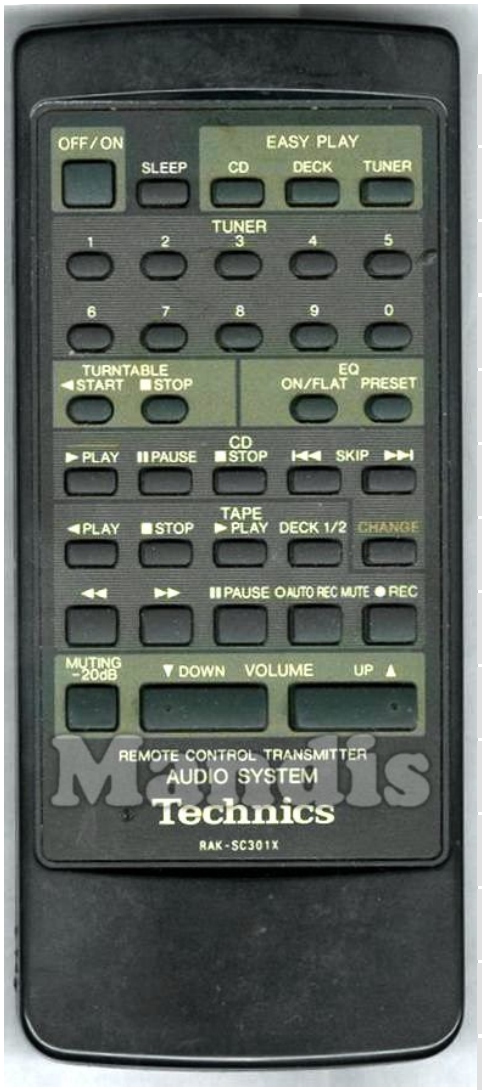

Original	Sustituto	Original	Sustituto
TUNER Easy Play Tuner	SHIFT + TUNER 6		

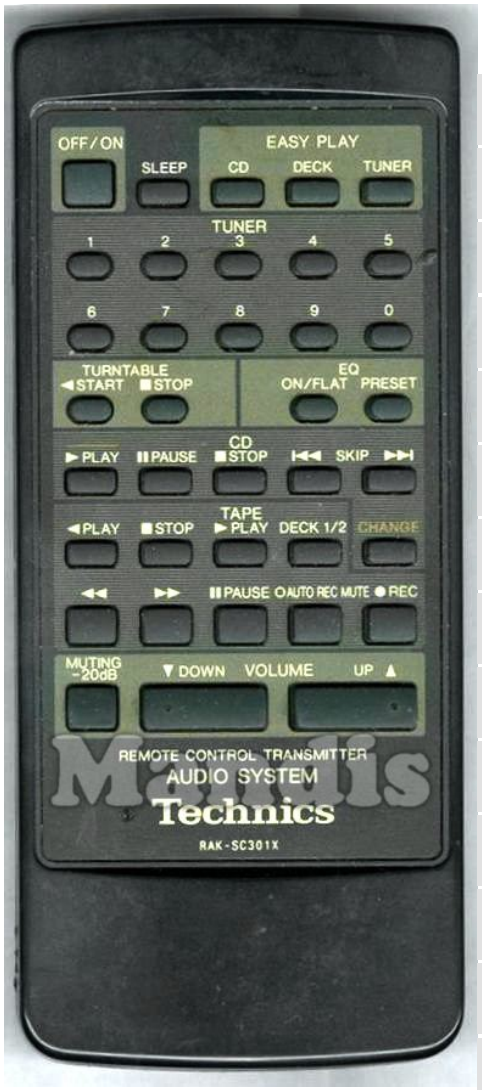

Original		Sustituto	
OFF/ON	Power Tape		Power
DECK	Tape	LIST SMART	Smart / List
1	1 Tape	TV 1	1
2	2 Tape	DVD 2	2
3	3 Tape	CD - STB 3	3
4	4 Tape	VIDEO 4	4
5	5 Tape	TAPE 5	5
6	6 Tape	TUNER 6	6
7	7 Tape	AUX - HDD 7	7
8	8 Tape	USB 8	8
9	9 Tape	BLUETOOTH 9	9
0	0 Tape	HDMI - SAT 0	0
STOP	Stop Tape	HOLD	Stop / Hold
PLAY	Play Tape	SLOW	Play / Slow
	I <</ << Tape	TUNE-	<< / Tune-
	I << Tape	PRESET-	I << / Preset-
	>>/ >>I Tape	TUNE+	>> / Tune+

Original		Sustituto	
	>>I Tape	PRESET+	>>I / Preset+

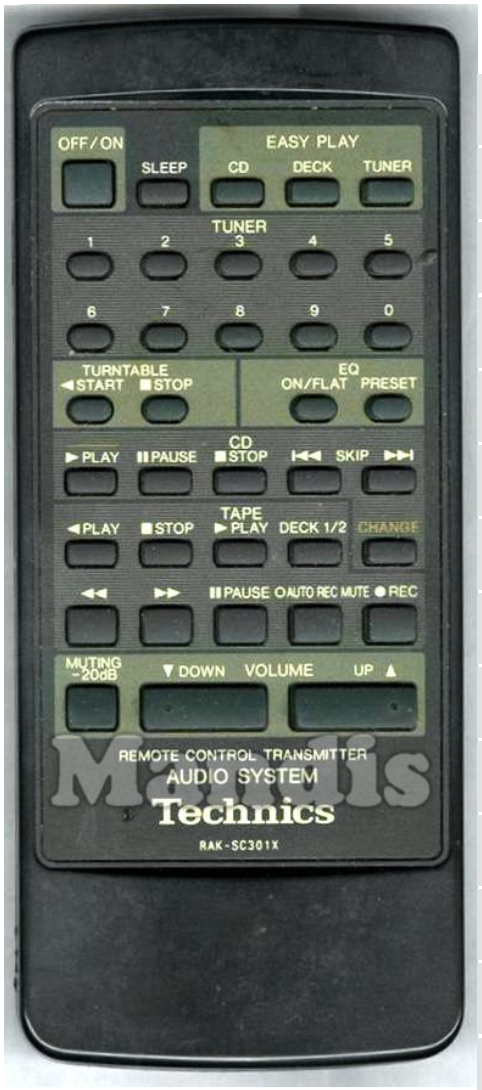

Original		Sustituto	
OFF/ON	Power Tuner		Power
TUNER	Tuner	SIZE ZOOM	Zoom / Si ze
1	1 Tuner	TV 1	1
2	2 Tuner	DVD 2	2
3	3 Tuner	CD - STB 3	3
4	4 Tuner	VIDEO 4	4
5	5 Tuner	TAPE 5	5
6	6 Tuner	TUNER 6	6
7	7 Tuner	AUX - HDD 7	7
8	8 Tuner	USB 8	8
9	9 Tuner	BLUETOOTH 9	9
0	0 Tuner	HDMI - SAT 0	0
	I <<I <<	TUNE-	<< / Tune-
	>>I >>I	TUNE+	>> / Tune+

Original	Sustituto