Mandis shop

JVC RM-SUXG38R

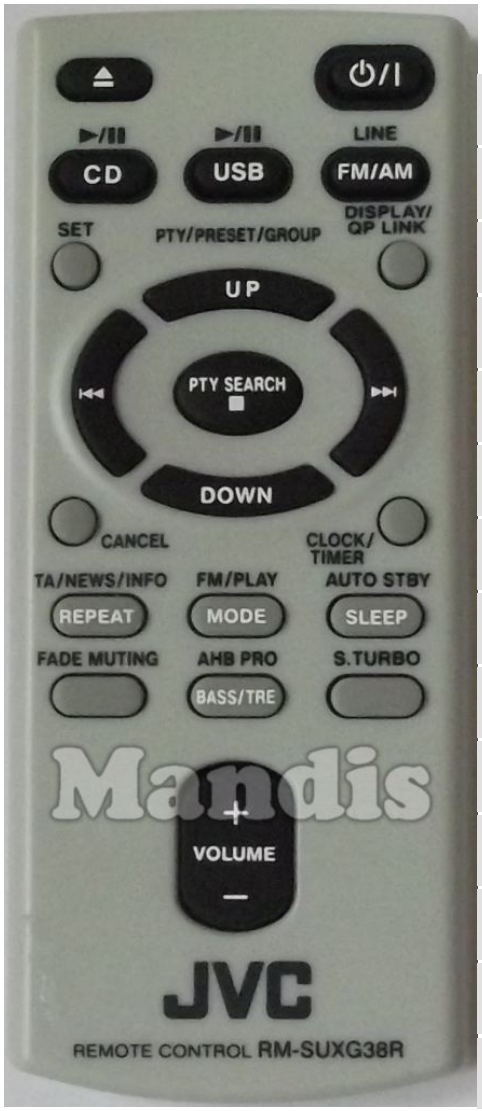

Original		Sustituto	
⏻/I	Power	⏻	Power
⏏	Open/Close	SURROUND ⏏	Eject / Surround
▶/II CD	Play/Pause CD	SLOW ▶	Play / Slow
▶/II USB	Play/Pause USB	SHIFT + SLOW ▶	Shift + Play /
LINE FM/AM	FM/AM Line	PROGRAM TV/RADIO	TV/Radio /
SET	Set	OPT-TOOLS SETUP	Setup / OPT /
DISPLAY/ QP LINK	Display/QP Link	MEDIA DISPLAY	Display / Media
CANCEL	Cancel	CLEAR EXIT CANCEL	Exit / Cancel / Clear
CLOCK/ TIMER	Clock/Timer	SHIFT + TIMER SLEEP	Shift + Sleep / Timer
PTY/PRESET/GROUP UP	PTY/Preset/Group	▲	Up
DOWN	PTY/Preset/Group Down	▼	Down
I<<	I<<	PRESET- ⏮	I<< / Preset-
>>I	>>I	PRESET+ ⏭	>>I / Preset+
PTY SEARCH	Stop	HOLD ■	Stop / Hold
PTY SEARCH	PTY Search	NETFLIX SEARCH	Red / Netflix / Search
TA/NEWS/INFO REPEAT	Repeat/TA/News/I	APP REPEAT	Green / APP / Repeat
FM/PLAY MODE	Mode/FM Play	LIST SMART	Smart / List

Original		Sustituto	
AUTO STBY SLEEP	Sleep/Auto	TIMER SLEEP	Sleep / Timer
FADE MUTING	Fade Muting	DIMMER MUTE	Mute / Dimmer
AHB PRO BASS/TRE	Bass/Tre/AHB Pro	LANG I/II AUDIO	Audio / Lang I/II
S.TURBO	S.Turbo	SHIFT + LIST SMART	Shift + Smart / List
+ VOLUME	Vol+	+ VOL	Vol+
VOLUME –	Vol-	VOL –	Vol-

https://mandos-a-distancia.es/es/JVC/1065468-12497-mando-de-sustitucion-para-JVC-RMSUXG38R.html