Mandis shop

TC 359

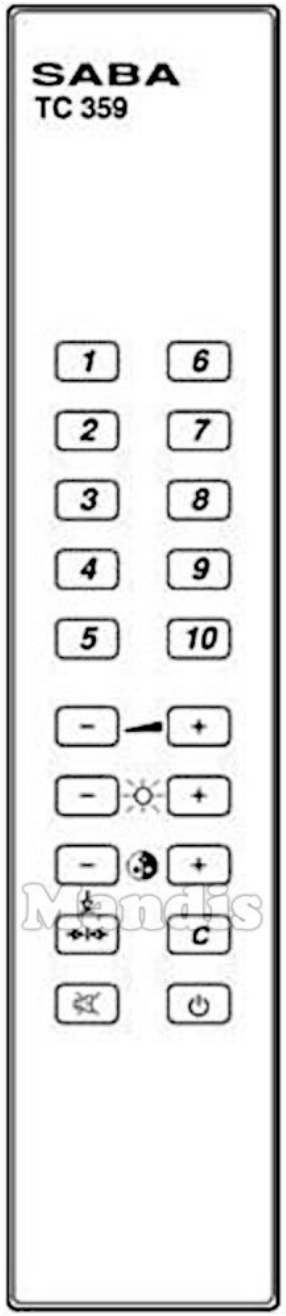

Original		Sustituto	
1	1		Power
6	6	REC MODE	Rec / Rec Mode
2	2	DIMMER MUTE	Mute / Dimmer
7	7	TUNE-	<< / Tune-
3	3	SLOW	Play / Slow
8	8	TUNE+	>> / Tune+
4	4	STEP - FREEZE	Pause / Step / Freeze
9	9	PRESET-	I<< / Preset-
5	5	HOLD	Stop / Hold
10	10	PRESET+	>>I / Preset+
	Vol-	TITLE SOUND	Sound / Title
	Vol+	LANG I/II AUDIO	Audio / Lang I/II
	Brightness-	EQ SUBTITLE	Subtitle / EQ
	Brightness+	SURROUND	Eject / Surround
	Contrast-	FORMAT PICTURE	Picture / Format
	Contrast+	SIZE ZOOM	Zoom / Size
	->I<-	TIMER SLEEP	Sleep / Timer

Original		Sustituto	
C	C	PROGRAM TV/ RADIO	TV/Radio /
	Mute	TOP MENU D.MENU	D.Menu / Top
	Power	OPT-TOOLS SETUP	Setup / OPT /

https://mandos-a-distancia.es/es/Saba/1066132-58490-mando-de-sustitucion-para-Saba-TC-359.html