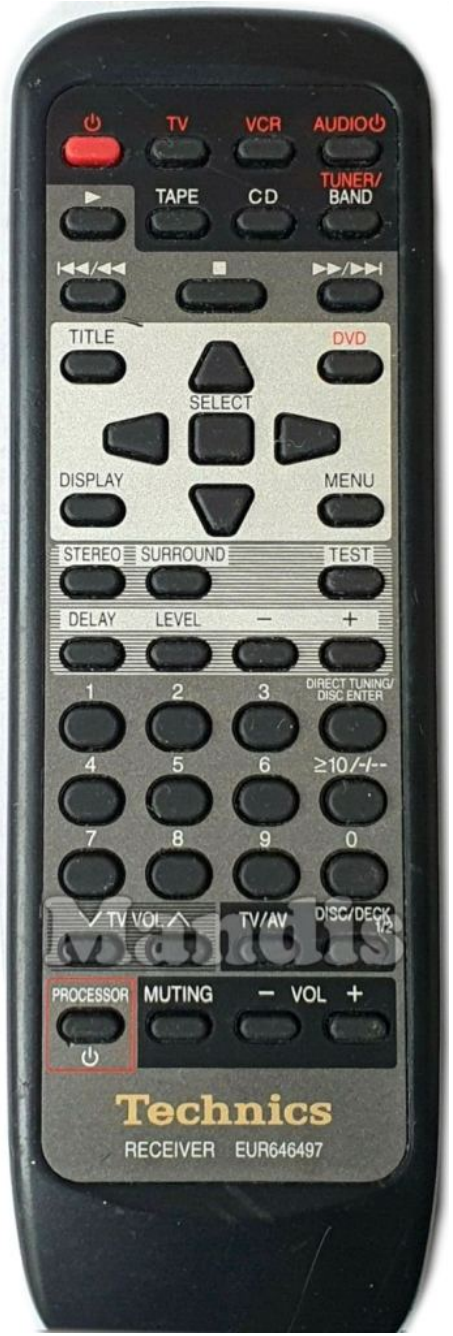

Original	Sustituto
Power TV	Power
TV	Shift + 1
VCR	Shift + 4
Tape	Shift + 5
CD	Shift + 3
Tuner / Band	Shift + 6
Up	Up
DVD	Shift + 2
Left	Left
Select	OK
Right	Right
Display	Display / Media
Down	Down
Menu	Menu / Home
Stereo	Audio / Lang I/II
Surround	Eject / Surround
Test	Text / Goto

Original	Sustituto
Delay	Back / Return
Level	Smart / List
-	CH- / Page-
+	CH+ / Page+
1 Tv	1
2 Tv	2
3 Tv	3
4 Tv	4
5 Tv	5
6 Tv	6
>10/-/-- Tv	Guide / EPG / -/--
7 Tv	7
8 Tv	8
9 Tv	9
0 Tv	0
Tv Vol Down	Shift + Vol -
Tv Vol Up	Shift + Vol +

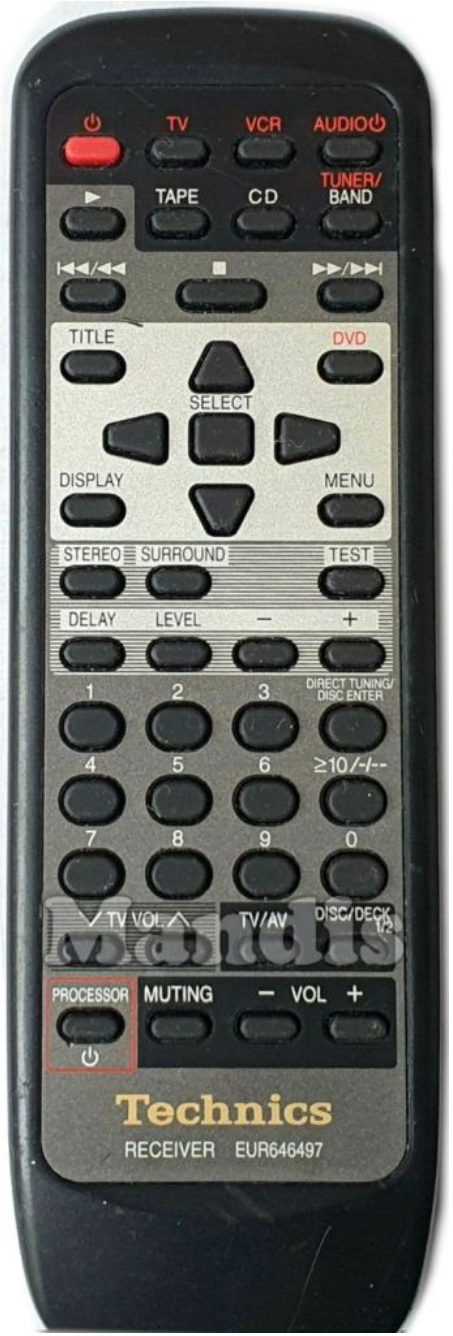

Original		Sustituto		Original	Sustituto
TV/AV	Tv/AV	RDS AV INPUT	AV / Input / RDS		
DISC/DECK 1/2	Disc/Deck 1/2	TOP MENU D.MENU	D.Menu / Top		
MUTING	Muting	DIMMER MUTE	Mute / Dimmer		
− VOL	Vol -	VOL −	Vol -		
VOL +	Vol +	+ VOL	Vol +		

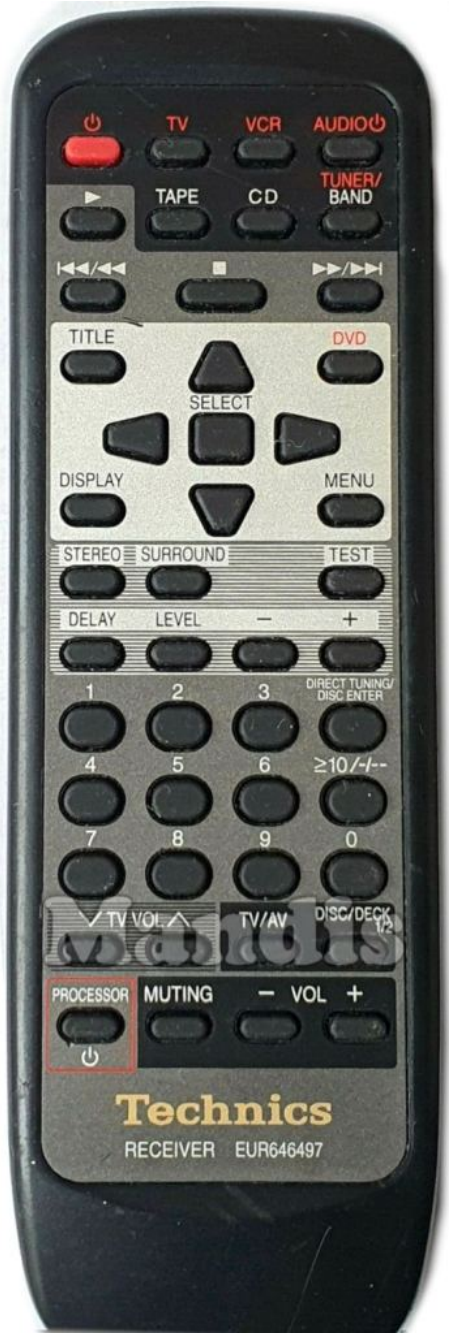

Original	Sustituto
Power DVD	Power
TV	Shift + 1
VCR	Shift + 4
Play DVD	Play / Slow
Tape	Shift + 5
CD	Shift + 3
Tuner / Band	Shift + 6
I <<| << DVD	I << / Preset-
I <<| << DVD	<< / Tune-
Stop DVD	Stop / Hold
>>| >>I DVD	>> / Tune+
>>| >>I DVD	>>I / Preset+
Up	Up
DVD	Shift + 2
Left	Left
Select	OK
Right	Right

Original	Sustituto
Display	Display / Media
Down	Down
Menu	Menu / Home
Stereo	Audio / Lang I/II
Surround	Eject / Surround
Test	Text / Goto
Delay	Back / Return
Level	Smart / List
-	CH- / Page-
+	CH+ / Page+
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6
>10/-/-- DVD	Guide / EPG / -/--

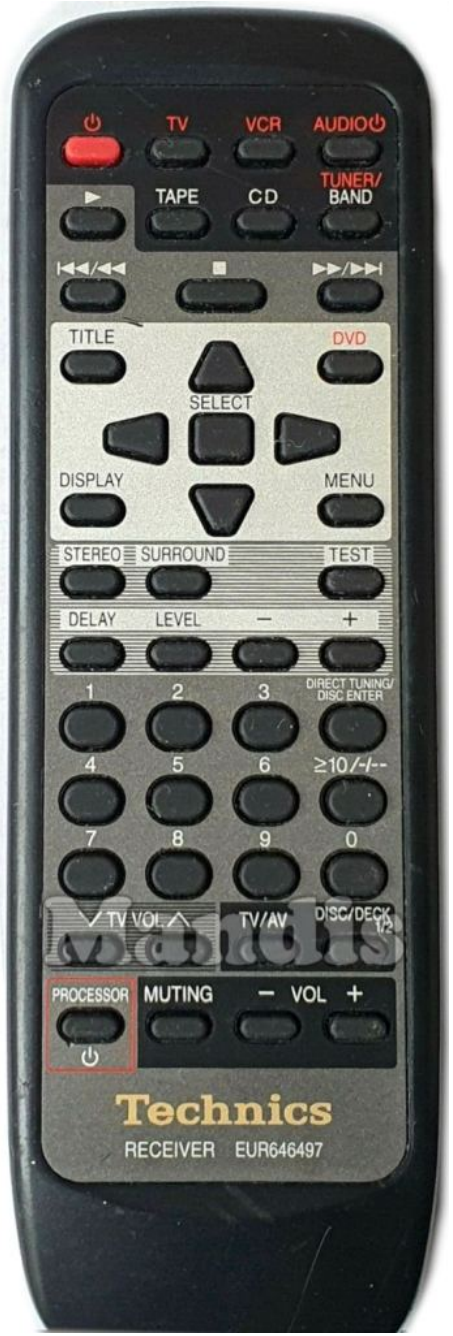

Original		Sustituto	
7	7 DVD	7	7
8	8 DVD	8	8
9	9 DVD	9	9
0	0 DVD	0	0
DISC/DECK 1/2	Disc/Deck 1/2	TOP MENU D.MENU	D. Menu / Top
MUTING	Muting	DIMMER MUTE	Mute / Dimmer
− VOL	Vol -	VOL −	Vol -
VOL +	Vol +	+ VOL	Vol +

Original	Sustituto

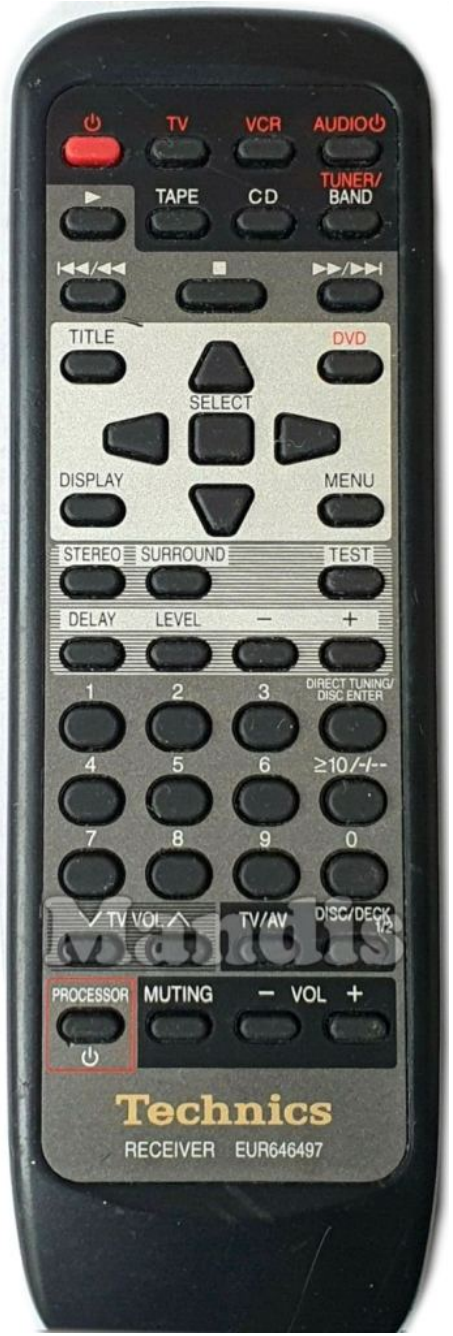

Original	Sustituto
Power CD	Power
Power Tape	SHIFT + Power: Shift + Power
TV	SHIFT + TV 1: Shift + 1
VCR	SHIFT + VIDEO 4: Shift + 4
Play CD	SLOW: Play / Slow
Play Tape	SHIFT + SLOW: Shift + Play /
Tape	SHIFT + TAPE 5: Shift + 5
CD	SHIFT + CD - STB 3: Shift + 3
Tuner / Band	SHIFT + TUNER 6: Shift + 6
I <<| << CD	TUNE-: << / Tune-
I <<| << Tape	SHIFT + PRESET-: Shift + I << / Preset-
I <<| << CD	PRESET-: I << / Preset-
I <<| << Tape	SHIFT + TUNE-: Shift + << /
Stop CD	HOLD: Stop / Hold
Stop Tape	SHIFT + HOLD: Shift + Stop /
>>| >>I CD	TUNE+: >> / Tune+
>>| >>I Tape	SHIFT + TUNE+: Shift + >> / Tune+

Original	Sustituto
>>| >>I CD	PRESET+: >>I / Preset+
>>| >>I Tape	SHIFT + PRESET+: Shift + >>I / Preset+
Up	Up
DVD	SHIFT + DVD 2: Shift + 2
Left	Left
Select	OK
Right	Right
Display	MEDIA DISPLAY: Display / Media
Down	Down
Menu	HOME MENU: Menu / Home
Stereo	LANG I/II AUDIO: Audio / Lang I/II
Surround	SURROUND: Eject / Surround
Test	GOTO TEXT: Text / Goto
Delay	RETURN BACK: Back / Return
Level	LIST SMART: Smart / List
-	CH PAGE -: CH- / Page-
+	CH PAGE +: CH+ / Page+

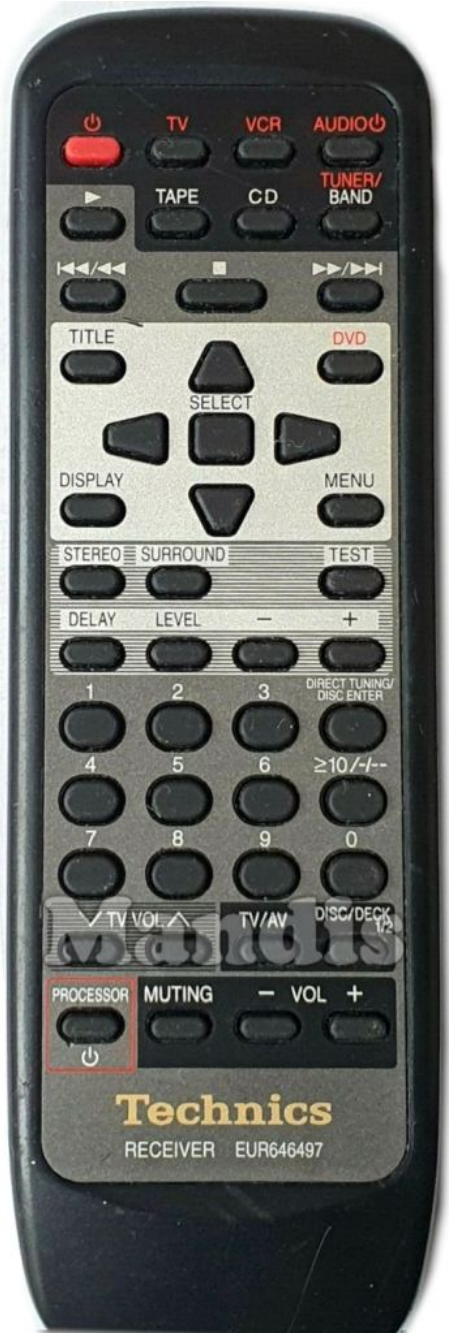

Original	Sustituto	Original	Sustituto
1 CD- Tape	1		
2 CD- Tape	2		
3 CD- Tape	3		
Direct Tuning/Disc Ente	D. Menu / Top		
4 CD- Tape	4		
5 CD- Tape	5		
6 CD- Tape	6		
>10/-/-- CD- Tape	Guide / EPG / -/--		
7 CD- Tape	7		
8 CD- Tape	8		
9 CD- Tape	9		
0 CD- Tape	0		
Disc/Deck 1/2	Info / Angle		
Disc/Deck 1/2	Shift + Info / Angle		
Muting	Mute / Dimmer		
Vol -	Vol -		
Vol +	Vol +		

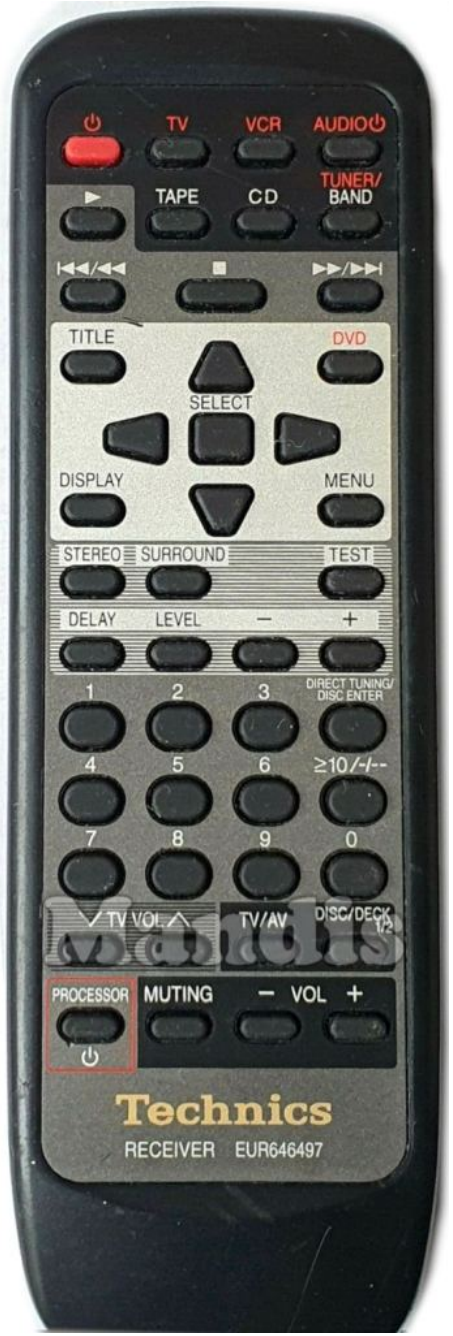

Original	Sustituto
Power VCR	SHIFT + Power (Shift + Power)
Power Tuner/Band	Power
TV	NETFLIX / SEARCH (Red / Netflix / Search)
VCR	PC / FAV MARKER (Fav / Marker / PC)
Play	SLOW (Play / Slow)
Tape	SHIFT + PC / FAV MARKER (Shift + Fav / Marker / PC)
CD	YouTube / REPEAT A-B (Yellow / YouTube / Repeat)
TUNER/ BAND	Prime Video / RANDOM (Blue / Prime Video / Random)
I <<</ <<	TUNE- (<< / Tune-)
Stop	HOLD (Stop / Hold)
>>/ >>I	TUNE+ (>> / Tune+)
Up	Up
DVD	APP / REPEAT (Green / APP / Repeat)
Left	Left
Select	OK
Right	Right
Display	MEDIA / DISPLAY (Display / Media)

Original	Sustituto
Down	Down
Menu	HOME / MENU (Menu / Home)
Stereo	LANG I/II / AUDIO (Audio / Lang I/II)
Surround	SURROUND (Eject / Surround)
Test	GOTO / TEXT (Text / Goto)
Delay	RETURN / BACK (Back / Return)
Level	LIST / SMART (Smart / List)
-	CH PAGE - (CH- / Page-)
+	CH PAGE + (CH+ / Page+)
1 VCR	SHIFT + TV 1 (Shift + 1)
1 Tuner/Band	TV 1 (1)
2 VCR	SHIFT + DVD 2 (Shift + 2)
2 Tuner/Band	DVD 2 (2)
3 VCR	SHIFT + CD-STB 3 (Shift + 3)
3 Tuner/Band	CD-STB 3 (3)
Direct Tuning/Disc Ente	TOP MENU / D.MENU (D. Menu / Top)
4 VCR	SHIFT + VIDEO 4 (Shift + 4)

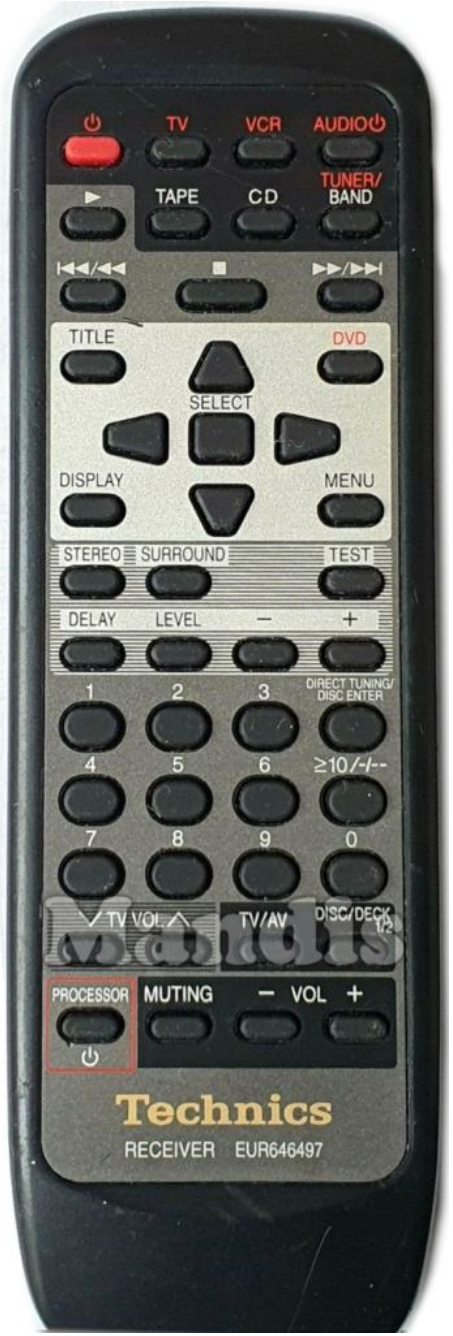

Original	Sustituto
4 Tuner / Band	4
5 VCR	Shift + 5
5 Tuner / Band	5
6 VCR	Shift + 6
6 Tuner / Band	6
>10/ - / - - VCR	Shift + Guide / EPG / - / - -
>10/ - / - -	Guide / EPG / - / - -
7 VCR	Shift + 7
7 Tuner / Band	7
8 VCR	Shift + 8
8 Tuner / Band	8
9 VCR	Shift + 9
9 Tuner / Band	9
0 VCR	Shift + 0
0 Tuner / Band	0
Disc/Deck 1/2	Info / Angle
Muting	Mute / Dimmer

Original	Sustituto
Vol -	Vol -
Vol +	Vol +